

# Instruction Manual

**Tektronix**

**Comparator**

**015-0310-01**

**070-2817-00**

CG 5010 & CG 5011 references apply to  
CG 551AP & CG 5001 instruments.

**Warning**

The servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing unless you are qualified to do so. Refer to the Safety Summary prior to performing service.

**Please check for change information at the rear of this manual.**

First Printing; March 1980  
Revised Printing: January 1991

### Instrument Serial Numbers

Each instrument manufactured by Tektronix has a serial number on a panel insert or tag, or stamped on the chassis. The first letter in the serial number designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits. The country of manufacture is identified as follows:

B010000	Tektronix, Inc., Beaverton, Oregon, USA
E200000	Tektronix United Kingdom, Ltd., London
J300000	Sony/Tektronix, Japan
H700000	Tektronix Holland, NV, Heerenveen, The Netherlands

Instruments manufactured for Tektronix by external vendors outside the United States are assigned a two digit alpha code to identify the country of manufacture (e.g., JP for Japan, HK for Hong Kong, IL for Israel, etc.).

Tektronix, Inc., P.O. Box 500, Beaverton, OR 97077

Printed in U.S.A.

Copyright © Tektronix, Inc., 1980, 1991. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. The following are registered trademarks: TEKTRONIX, TEK, TEKPROBE, and SCOPE-MOBILE.

# TABLE OF CONTENTS

	Page		Page
LIST OF ILLUSTRATIONS .....	ii	Section 5 MAINTENANCE .....	5-1
LIST OF TABLES .....	iii	Mercury Wetted Relays .....	5-1
OPERATORS SAFETY SUMMARY .....	iv	Test DUT Relay .....	5-1
SERVICE SAFETY SUMMARY .....	v	Test CG Relay .....	5-1
 		Disassembly and Reassembly .....	5-1
Section 1 SPECIFICATION .....	1-1	Top Cover Removal and Replacement .....	5-1
Description .....	1-1	Bottom Cover Removal and	
Accessories .....	1-1	Replacement .....	5-1
Performance Conditions .....	1-1	Circuit Board Removal and	
Electrical Characteristics .....	1-2	Replacement .....	5-1
Environmental .....	1-3	Cleaning Instructions .....	5-2
Physical Characteristics .....	1-4	Exterior .....	5-2
 		Interior .....	5-2
Section 2 OPERATING INSTRUCTIONS .....	2-1	Obtaining Replacement Parts .....	5-3
Introduction .....	2-1	Ordering Parts .....	5-3
Connecting To CG 5010/CG 5011 .....	2-1	Static-Sensitive Components .....	5-3
Controls and Connectors .....	2-1	Test Equipment .....	5-3
General Operating Information .....	2-1	 	
Repackaging Information .....	2-3	Section 6 OPTIONS .....	6-1
 		Section 7 REPLACEABLE ELECTRICAL PARTS	
 		Section 8 DIAGRAMS AND ILLUSTRATIONS	
 		Schematic Diagrams	
 		Parts Location Grids	
 		Section 9 REPLACEABLE MECHANICAL PARTS	
 		Exploded View	
 		Accessories	
 		CHANGE INFORMATION	
Section 3 THEORY OF OPERATION .....	3-1		
Introduction .....	3-1		
Input To Select CG 5010/CG 5011 .....	3-1		
Input To Select Device Under Test .....	3-2		
Alternating Input Selection (Automatic) .....	3-2		
Section 4 CALIBRATION .....	4-1		
Performance Check .....	4-1		
Introduction .....	4-1		
Services Available .....	4-1		
Test Equipment Required .....	4-1		

**WARNING**

*THE FOLLOWING SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID PERSONAL INJURY, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.*

## LIST OF ILLUSTRATIONS

Figure No.	Page	Figure No.	Page
2-1	Comparator Head Controls and Connectors .....2-2	4-2	Comparator Head DC Voltage and Resistance Check Set-up .....4-4
3-1	CG 5010/CG 5011 OUTPUT Connector (Front View) .....3-1	5-1	Relay Operation .....5-1
3-2	Program To Select CG 5010/CG 5011 .....3-1	5-2	Cover and Circuit Board Removal and Replacement .....5-2
3-3	Program To Select Device Under Test .....3-2	8-1	Comparator Head Board (A10) (Parts Location)
3-4	Program To Select Automatic .....3-2	8-2	Comparator Head Board (A10) (Adjust Location)
4-1	Comparator Head Calibration and Performance Check Set-up .....4-2		

# LIST OF TABLES

Table No.		Page	Table No.		Page
1-1	ELECTRICAL CHARACTERISTICS .....	1-2	4-1	LIST OF TEST EQUIPMENT REQUIREMENTS .....	4-1
1-2	ENVIRONMENTAL .....	1-3	5-1	RELATIVE SUSCEPTIBILITY TO STATIC DISCHARGE DAMAGE .....	5-3
1-3	PHYSICAL CHARACTERISTICS .....	1-4			

Qservice sample File