

Tektronix[®]
COMMITTED TO EXCELLENCE

Oservice Sample File

**PLEASE CHECK FOR CHANGE INFORMATION
AT THE REAR OF THIS MANUAL.**

**PROGRAMMABLE
PULSE HEAD
015-0611-00**

**Tektronix, Inc.
P.O. Box 500
Beaverton, OR 97077**

070-7893-00
Product Group 75

Serial Number _____

First Printing JAN 1991
Revised AUG 1991

TABLE OF CONTENTS

	Page		Page
LIST OF ILLUSTRATIONS	ii	Section 5 MAINTENANCE	5-1
LIST OF TABLES	ii	Recalibration	5-1
OPERATORS SAFETY SUMMARY	iii	Disassembly and Reassembly	5-1
SERVICE SAFETY SUMMARY	iv	Bottom Cover Removal and Replacement	5-1
Section 1 SPECIFICATION	1-1	Top Cover Removal and Replacement	5-2
Introduction	1-1	Hycon Connector	5-2
Accessories	1-1	Disassembly and Removal	5-2
Performance Conditions	1-1	Reassembly and Replacement	5-4
Electrical Characteristics	1-1	Board Removal and Replacement	5-4
Environmental Characteristics	1-2	Cable Removal and Replacement	5-4
Physical Characteristics	1-2	Log Cell Removal and Replacement	5-4
Section 2 OPERATING INSTRUCTIONS	2-1	Cleaning Instructions	5-5
Introduction	2-1	Exterior	5-5
Connecting to the CG 5010/CG 5011	2-1	Interior	5-5
Controls and Connectors	2-1	Obtaining Replacement Parts	5-5
General Operating Information	2-1	Ordering Parts	5-5
Programming Commands Via GPIB	2-2	Static-Sensitive Components	5-5
Repackaging Information	2-3	Test Equipment	5-6
Section 3 THEORY OF OPERATION	3-1	Section 6 OPTIONS	6-1
Introduction	3-1	Section 7 REPLACEABLE ELECTRICAL PARTS	
Relay Switching Circuit	3-2	Section 8 DIAGRAMS AND ILLUSTRATIONS	
Fast Edge Driving Circuit	3-2	Schematic Diagrams	
Positive Fast Edge Generator	3-2	Parts Location Grids	
Negative Fast Edge Generator	3-4	Section 9 REPLACEABLE MECHANICAL PARTS	
Straight-Through (Direct) Mode	3-4	Exploded View	
Section 4 CALIBRATION	4-1	Accessories	
Performance Check	4-1	CHANGE INFORMATION	
Introduction	4-1		
Calibration Interval	4-1		
Services Available	4-1		
Test Equipment Required	4-1		
Performance Check Procedure	4-2		
Adjustment Procedure	4-5		
Introduction	4-5		
Test Equipment Required	4-5		
Preparation	4-5		

WARNING

THE FOLLOWING SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID PERSONAL INJURY DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.

LIST OF ILLUSTRATIONS

Fig. No.	Page	Fig. No.	Page
Programmable Pulse Head, 015-0611-00	v	3-8 From NEGATIVE FAST EDGE Mode To Direct Mode	3-6
2-1 Pulse Head Connector	2-1	4-1 Measurement of step 2 risetime	4-3
3-1 Pulse Head Block Diagram	3-1	4-2 Measurement of step 3 upper peak of aberration	4-4
3-2 From NEGATIVE To POSITIVE While In FAST EDGE Mode	3-2	4-3 Measurement of step 3 peak-to-peak aberration of adjacent peaks	4-4
3-3 From POSITIVE To NEGATIVE While in FAST EDGE Mode	3-3	5-1 Maintenance Diagram (Exploded View)	5-1
3-4 From Direct Mode To POSITIVE FAST EDGE Mode	3-3	5-2 Hypcon Connector (Exploded View)	5-3
3-5 From Direct Mode to NEGATIVE FAST EDGE Mode	3-4	8-1 Edge Driver Board (A20) (Parts Location)	
3-6 Polarity And Output Relay Switching	3-5	8-2 Fast Edge Board (A22) (Parts Location)	
3-7 From POSITIVE FAST EDGE Mode To Direct Mode	3-6	8-3 Fast Edge Board (A22) (Adjust Location)	

LIST OF TABLES

Table No.	Page	Table No.	Page
1-1 ELECTRICAL CHARACTERISTICS	1-1	4-1 LIST OF TEST EQUIPMENT REQUIREMENTS	4-1
1-2 ENVIRONMENTAL CHARACTERISTICS	1-2	5-1 RELATIVE SUSCEPTIBILITY TO STATIC DISCHARGE DAMAGE	5-6
1-3 PHYSICAL CHARACTERISTICS	1-2		
2-1 CG 5010/CG5011 SETTING COMMANDS	2-2		