



## OPERATING AND SERVICE MANUAL

-hp- Part No. 00209-90004

Microfiche Part No. 00209-90054

# MODEL 209A SINE/SQUARE OSCILLATOR

Serial Number 1045A05907 and Higher

### IMPORTANT NOTICE

Any changes made in instruments with serial numbers greater than those stated on this title page will be noted on a change sheet supplied with this manual. If the serial number of your instrument is lower than that stated above, the manual can contain revisions that do not apply to your instrument. Backdating information located in Section VIII adapts this manual to these instruments.

### WARNING

*To help minimize the possibility of electrical fire or shock hazards, do not expose this instrument to rain or excessive moisture.*

Copyright Hewlett-Packard Company 1968  
P.O. Box 301, Loveland, Colorado, 80537 U.S.A.

Printed: July 1976

**TABLE OF CONTENTS**

Section	Page	Section	Page
I. GENERAL INFORMATION . . . . .	1-1	5-8. Distortion Check . . . . .	5-3
1-1. Introduction . . . . .	1-1	5-9. Output Voltage and Impedance Check (Sine Wave) . . . . .	5-4
1-3. Specifications . . . . .	1-1	5-10. Output Control Check (Sine Wave) . . . . .	5-4
1-5. Description . . . . .	1-1	5-11. Balance Check (Sine Wave) . . . . .	5-4
1-10. Instrument/Manual Identification . . . . .	1-1	5-12. Output Voltage Check (Square Wave) . . . . .	5-4
		5-13. Rise Time Check (Square Wave) . . . . .	5-5
Section	Page	5-14. Symmetry Check (Square Wave) . . . . .	5-5
II. INSTALLATION . . . . .	2-1	5-15. Sync Output Check . . . . .	5-5
2-1. Introduction . . . . .	2-1	5-16. Sync Input Check . . . . .	5-5
2-3. Initial Inspection . . . . .	2-1	5-17. Cover Removal . . . . .	5-6
2-5. Power Requirements . . . . .	2-1	5-22. Adjustment and Calibration Procedure . . . . .	5-6
2-7. Grounding Requirements . . . . .	2-1	5-23. Introduction . . . . .	5-6
2-9. Installation . . . . .	2-1	5-26. Power Supply . . . . .	5-6
2-11. Bench Mounting . . . . .	2-1	5-28. Bias Adjustment . . . . .	5-6
2-13. Rack Mounting . . . . .	2-1	5-29. AGC Adjustment . . . . .	5-6
2-15. Combination Mounting . . . . .	2-1	5-30. AGC and Frequency Adjustment . . . . .	5-6
2-17. Repackaging for Shipment . . . . .	2-1	5-31. High Frequency Adjustment . . . . .	5-7
		5-32. Distortion Adjustment . . . . .	5-7
Section	Page	5-34. Factory Selected Components . . . . .	5-7
III. OPERATING INSTRUCTIONS . . . . .	3-1	5-36. Troubleshooting Procedures . . . . .	5-8
3-1. Introduction . . . . .	3-1	5-37. Front Panel Procedure . . . . .	5-8
3-3. Turn On Procedure . . . . .	3-1	5-40. Detailed Circuit Troubleshooting . . . . .	5-8
3-5. Operating Considerations . . . . .	3-1	Section	Page
3-6. Floating Output . . . . .	3-1	VI. REPLACEABLE PARTS . . . . .	6-1
3-8. Balance . . . . .	3-1	6-1. Introduction . . . . .	6-1
3-10. Synchronization . . . . .	3-1	6-4. Ordering Information . . . . .	6-1
3-13. Low Distortion . . . . .	3-1	6-6. Non-Listed Parts . . . . .	6-1
Section	Page	Section	Page
IV. THEORY OF OPERATION . . . . .	4-1	VII. CIRCUIT DIAGRAMS . . . . .	7-1
4-1. Introduction . . . . .	4-1	7-1. Introduction . . . . .	7-1
4-4. Block Diagram Description . . . . .	4-1	7-3. Schematic Diagrams . . . . .	7-1
4-5. Bridge and Amplifier . . . . .	4-1	7-5. Component Location Diagrams . . . . .	7-1
4-9. Peak Comparator and AGC . . . . .	4-1	Section	Page
4-13. Buffer Amplifier . . . . .	4-3	VIII. BACKDATING . . . . .	8-1
4-15. Sine-Square Converter . . . . .	4-3	8-1. Introduction . . . . .	8-1
4-17. Detailed Circuit Description . . . . .	4-3	8-4. Backdating Changes . . . . .	8-1
4-25. Power Supply . . . . .	4-3	APPENDICES	
Section	Page	A. CODE LIST OF MANUFACTURERS	
V. MAINTENANCE . . . . .	5-1	B. SALES AND SERVICE OFFICES	
5-1. Introduction . . . . .	5-1		
5-4. Performance Checks . . . . .	5-1		
5-6. Dial Accuracy Check . . . . .	5-1		
5-7. Flatness Check . . . . .	5-1		

**LIST OF TABLES**

Table	Page	Table	Page
1-1. Specifications . . . . .	1-2	5-4. Distortion Check . . . . .	5-3
5-1. Required Test Equipment . . . . .	5-0	5-5. Factory Selected Components . . . . .	5-7
5-2. Dial Accuracy Check . . . . .	5-1	5-6. Front Panel Symptoms . . . . .	5-8
5-3. Flatness Check . . . . .	5-2	6-1. Replaceable Parts . . . . .	6-2

**LIST OF ILLUSTRATIONS**

Figure	Page	Figure	Page
2-1. Dimensions . . . . .	2-2	5-3. 2 MHz Distortion Check . . . . .	5-3
3-1. Description of Controls and Connectors . . . . .	3-2	5-4. Balance Check . . . . .	5-4
4-1. Model 209A Block Diagram . . . . .	4-2	5-5. Sync Input Check . . . . .	5-5
4-2. RC Frequency Network Characteristics . . . . .	4-1	6-1. Front Panel Exploded View . . . . .	6-4
5-1. Dial Accuracy Check . . . . .	5-1	7-1. Oscillator Schematic (A1) . . . . .	7-3/7-4
5-2. Flatness Check . . . . .	5-2	7-2. Power Supply Schematic . . . . .	7-5/7-6

Qservice Free Sample File