



Qservice - 2710 Users manual Sample - Qservice

# 2710

Spectrum Analyzer  
User's Guide

**Tektronix**<sup>®</sup>

# 2710

Spectrum Analyzer  
User's Guide

**Tektronix**<sup>®</sup>  
COMMITTED TO EXCELLENCE

**Table of Contents**

**Introduction ..... 1-1**

Using This Manual ..... 1-1  
 Typographical conventions ..... 1-3  
 What is a Spectrum Analyzer? ..... 1-5  
 What Can You Do with a Spectrum Analyzer? ..... 1-8  
 About the 2710 ..... 1-8

**Getting Started ..... 2-1**

Precautions ..... 2-1  
 Turning on the 2710 ..... 2-3  
 Restoring the Factory Default Settings ..... 2-4  
 The Spectral Display ..... 2-4  
 The Control Panel ..... 2-7  
 Sounds ..... 2-9  
 The Built-in Calibrator ..... 2-10  
 Making Your First Measurement ..... 2-11

**The Controls ..... 3-1**

**Fundamental Operations ..... 3-1**  
 Frequency Span/Division ..... 3-2  
 Maximum Span ..... 3-3  
 Zero Span ..... 3-3  
 Center Frequency Control ..... 3-4  
 Reference Level, Higher - Lower ..... 3-5  
 Reference Level, 1dB/10dB per Step ..... 3-6

**Enhanced Versatility ..... 3-7**  
 Resolution Bandwidth, Wider - Narrower ..... 3-7  
 Resolution Bandwidth, AUTO Mode ..... 3-9  
 Resolution Bandwidth, Video Filter ..... 3-10  
 Vertical Scale, 10dB/5dB/1dB per Step ..... 3-12  
 Vertical Scale, LIN ..... 3-13

Qservice-2710Users manual Sample - Qservice

Sweep, FAST - SLOW .....	3-14
Sweep, AUTO Mode .....	3-15
Sweep, SGL SWP .....	3-16
Sweep, LEVEL .....	3-17
Display Storage and the Analog Display .....	3-18
Display Storage, SAVE .....	3-20
Display Storage, Waterfall Mode .....	3-22
Display Storage, MAX HOLD .....	3-24
Frequency/Markers, MKR/ $\Delta$ /Off .....	3-25
Frequency/Markers, CTR MEAS/TRKG .....	3-28
Frequency/Markers, Next Peak Right/Left .....	3-32
Frequency/Markers, MKR PEAK FIND .....	3-33
<b>Miscellaneous Controls .....</b>	<b>3-33</b>
Graticule Illumination .....	3-34
INTENSITY .....	3-34
TRACE ROT, VERT POS, HORIZ POS .....	3-35

**The Menu -- Ultimate Flexibility .....** **4-1**

---

<b>Input Menu .....</b>	<b>4-7</b>
Turning the Calibrator On and Off .....	4-7
Changing the Reference Level .....	4-8
Setting the RF Attenuation .....	4-8
Changing Reference Level Units .....	4-9
Accommodating External Amplification/Attenuation .....	4-10
Accommodating a 75 Ohm Source .....	4-11
Setting the First Mixer Input Level .....	4-13
Turning the Preamplifier On and Off.....	4-14
Using the dBUV/M .....	4-15
<b>Marker/Frequency Menu .....</b>	<b>4-25</b>
Setting the Center Frequency Using the MKR/FREQ MENU .....	4-25
Setting the Span/Division Using the MKR/FREQ MENU .....	4-26
Using the Keypad to Set Start and Stop Frequencies .....	4-26
Using Markers to Set Start and Stop Frequencies .....	4-27
Transposing Markers .....	4-27
Changing the Knob Function .....	4-28

Moving the Marker to the Next Higher or Lower Peak .....	4-29
Marker to the Reference Level .....	4-30
Selecting the Tuning Increment .....	4-31
Center or Start Frequency .....	4-32
Setting the Signal Threshold .....	4-32
Counter Resolution .....	4-33
Programmed Tuning .....	4-34
Tabular Tuning .....	4-35
Frequency Offsets .....	4-36
<b>Display Menu .....</b>	<b>4-38</b>
Ensemble Averaging .....	4-38
Subtracting Stored Signals .....	4-43
Changing Acquisition Mode .....	4-47
Activating Minimum Hold .....	4-48
Adding Titles and Labels .....	4-49
Turning the On-screen Readouts On and Off .....	4-51
The Display Line and Limit Detector .....	4-52
Measuring Frequency Deviation .....	4-54
Measuring Percent Modulation .....	4-57
Displaying an External Source .....	4-58
<b>Applications Menu .....</b>	<b>4-58</b>
Measuring Occupied Bandwidths .....	4-59
Measuring Average Noise .....	4-60
Measuring Carrier to Noise Ratios .....	4-61
Searching for Signals .....	4-63
<b>Detector/Generator Menu .....</b>	<b>4-66</b>
Listening to FM Transmissions .....	4-66
Listening to AM Transmissions .....	4-67
Listening to FM or AM Transmissions .....	4-67
<b>Utility Menu .....</b>	<b>4-68</b>
Keypad Entered Control Settings .....	4-68
Recalling Last Power-Down Settings .....	4-70
User-Defined Power-Up Settings .....	4-70
Other User-Defined Settings .....	4-71
Normalizing the 2710 .....	4-72
System Configuration .....	4-75
The Communications Port .....	4-75

Qservice-2710 Users manual Sample - Qservice

Selecting the Screen Plotter	
Configuration .....	4-75
Selecting the Printer Configuration .....	4-76
Instrument Configuration .....	4-76
The Audio Alert Level .....	4-77
Setting the Minimum Signal Size .....	4-77
Sending Waveforms to a Computer .....	4-78
Turning Phase Lock On and Off .....	4-78
Turning Frequency Corrections	
On and Off .....	4-79
The Spectral Display in Menus .....	4-79
Changing the Sweep Holdoff .....	4-80
Setting the Date and Time .....	4-80
Protecting Stored Settings .....	4-80
Confirming Installed Options .....	4-81
Instrument Diagnostics and Adjustments .....	4-81
Aligning the Display with the Screen .....	4-82
Service Normalizations .....	4-82
If You Lose NVRAM .....	4-84
Plotting the Displayed Waveform .....	4-85
<b>Sweep/Trigger Menu .....</b>	<b>4-87</b>
Free Running the Sweep Generator .....	4-87
"Oscilloscope" Trigger Modes .....	4-87
TV Line Triggering .....	4-90
TV Video Field Triggering .....	4-93
Setting the Sweep Rate .....	4-93
Manually Scanning .....	4-94
The Video Monitor .....	4-94
<b>User-Definable Key .....</b>	<b>4-97</b>

Qservice - 2710 User's manual Sample - Qservice

**External I/O ..... 5-1**

---

**Mains Power ..... 5-1**  
J101 -- TV Sideband Adapter Interface ..... 5-1  
J102 -- External Trigger ..... 5-2  
J103 -- Accessory Connector ..... 5-3  
Pin 1 -- Video Input ..... 5-3  
Pin 2 -- Chassis and Signal Ground ..... 5-4  
Pin 3 -- Video Output ..... 5-5  
Pin 6 -- Sweep Gate ..... 5-5  
Pin 7 -- Sweep Ramp ..... 5-7

**Appendix A -- Broadcast AM, FM, and  
TV signal sources ..... A-1**

---

**Appendix B -- Error Messages. .... B-1**

---

**Index ..... I-1**

---

Qservice - 2710 Users manual Sample - Qservice

## List of Illustrations and Tables

---

### Illustrations

---

Figure 1-1. Spectrum analyzer block diagram (late model) .....	1-1
Figure 2-1. 2710 display with factory power-up settings .....	2-5
Figure 2-2. 2710 calibration signal and harmonics .....	2-2
Figure 2-3. Calibration signal and second harmonic .....	2-14
Figure 3-1. Example of a waterfall display .....	3-23
Figure 4-1. The 2710 menu hierarchy .....	4-2, 4-3
Figure 4-2. The Input Menu .....	4-4
Figure 4-3. Reference Level Units Menu .....	4-5
Figure 4-4. 75/50 ohm matching minimum loss pad .....	4-13
Figure 4-5. Equipment setup for field strength measurements .....	4-18
Figure 4-6. Average signal plus noise and average signal plus noise subtracted from the current sweep .....	4-44
Figure 4-7. Average MEAN noise and MAX HOLD signal plus noise spectra .....	4-45
Figure 4-8. B, C MINUS A OFFSET TO CENTER .....	4-46
Figure 4-9. B, C MINUS A OFFSET TO TOP .....	4-47
Figure 4-10. 2710 plot with title and plot label .....	4-51
Figure 4-11. Portion of US broadcast FM band .....	4-55
Figure 4-12. Instantaneous frequency deviation and maximum observed deviation .....	4-56
Figure 4-13. Frequency deviation by MAX HOLD technique .....	4-57
Figure 4-14. The SIGNAL SEARCH frequency range .....	4-64
Figure 4-15. Typical plotter output from the 2710 showing a broadcast television spectrum .....	4-86
Figure 4-16. Video field using internal or TV field triggering. ....	4-89
Figure 4-17. Video signal using continuous horizontal line triggering. ....	4-91
Figure 4-18. Video signal using knob-selectable horizontal line triggering .....	4-92
Figure 4-19. 2710 screen in video monitor mode. ....	4-96
Figure 5-1. Sweep gate and ramp timing. ....	5-6

**Tables**

---

Table 2-1. Effect of arrow keys. ....	2-8
Table 3-1. Display register status. ....	3-19
Table 4-1. Units associated with the letter-keys. ....	4-5
Table 4-2. Equivalent decibel - voltage values. ....	4-19

*Qservice - 2710 Users manual Sample - Qservice*