



OPERATING AND SERVICE MANUAL

(HP PART NO. 00400-90007)

MODEL 400D

SERIALS PREFIXED: 310-

MODEL 400H

SERIALS PREFIXED: 313-

MODEL 400L

SERIALS PREFIXED: 313-

AND

SPECIF. H02-400D

SERIALS PREFIXED: 310-

VACUUM TUBE VOLTMETER

Reproduced With Permission Courtesy Agilent Technologies, Inc.

Appendix C, Manual Backdating

Changes, adapts this manual to:

Models 400D/H02-400D,	Serial Nos. 313-28977 and below
Models 400H/L,	Serial Nos. 310-52371 and below
Models 400DR/HR/LR,	All Serial Nos.

Copyright Hewlett-Packard Company, 1961
P. O. Box 301, Loveland, Colorado, 80537 U. S. A.

TABLE OF CONTENTS

Section	Page	Section	Page
I GENERAL DESCRIPTION	1-1	5-22 Testing Voltmeter Performance . . .	5-5
1-1 Introduction	1-1	5-24 Calibration and Frequency Response Adjustments	5-8
1-4 Description	1-1	VI ILLUSTRATED PARTS BREAKDOWN	6-1
1-11 Accessories	1-2	6-1 General	6-1
II INSTALLATION	2-1	VII GROUP ASSEMBLY PARTS BREAKDOWN	7-1
2-1 Unpacking and Inspection	2-1	7-1 Vacuum Tube Voltmeter 400D/H/L	7-1
2-3 Line Voltage Requirement	2-1	7-2 Main Chassis Assembly	7-3
2-5 Power Line Connections	2-1	7-3 Range Switch Assembly 400D-19A	7-8
2-8 Installation	2-1	7-4 Printed Circuit Board Assembly 400D-75G	7-9
2-10 Operation Check	2-1	7-5 Printed Circuit Board Assembly 400D-75F	7-11
III OPERATING INSTRUCTIONS	3-1	7-6 Printed Circuit Board Assembly 400D-65C	7-12
3-1 Instrument Turn-On	3-1	VIII NUMERICAL INDEXES	8-1
3-3 General Operating Information	3-1	Part No. Numerical Index	8-1
3-12 Low-Level Measurements and Ground Currents	3-2	Hewlett-Packard Stock No. Index	8-2
3-14 Measurement of Voltage	3-2	IX REFERENCE DESIGNATION INDEX	9-1
3-17 Measurement of Decibels	3-3	Appendix A CODE LIST OF MANUFACTURERS	
3-20 Impedance Correction Graph	3-3	Appendix B SALES AND SERVICE OFFICES	
3-22 Use of Voltmeter Amplifier	3-4	Appendix C MANUAL BACKDATING CHANGES	
IV CIRCUIT DESCRIPTION	4-1		
4-1 Block Diagram	4-1		
4-3 Input Voltage Divider and Step Attenuator	4-1		
4-7 Broadband Voltmeter Amplifier	4-1		
4-10 Indicating Meter Circuit	4-1		
4-14 Power Supply	4-2		
V MAINTENANCE	5-1		
5-1 Scope	5-1		
5-3 Precautions	5-1		
5-5 Test Equipment Required	5-1		
5-7 Meter Zero Adjustment	5-1		
5-9 Cabinet Removal	5-2		
5-10 Tube Replacement	5-2		
5-13 Replacement of Special Parts	5-2		
5-17 Trouble Shooting	5-3		
5-20 Testing the Power Supply	5-3		

LIST OF ILLUSTRATIONS

Number	Title	Page	Number	Title	Page
1-1.	Vacuum Tube Voltmeters Models 400D, 400H, and 400L	1-0	5-6.	Test Setup for Calibration Check and Adjustments	5-7
1-2.	Table of Specifications	1-1	5-7.	Test Setup for Frequency Response Check and Adjustment	5-8
3-1.	Voltmeter Front Panel, Showing Controls and Connectors	3-0	5-8.	Voltage and Resistance Diagram	5-10
3-2.	Effect of Harmonics on Voltage Measurements	3-1	5-9.	Voltmeter Schematic Diagram	5-11
3-3.	Test Setup for Avoiding Ground Loop	3-2	5-10.	Diagram of RANGE Switch	5-12
3-4.	Impedance Correction Graph	3-5	7-1.	400D/H/L Vacuum Tube Voltmeter	7-1
4-1.	Voltmeter Block Diagram	4-0	7-2.	Main Chassis Assembly (Sheet 1 of 2)	7-3
4-2.	Simplified Schematic of Meter Bridge Circuit	4-2	7-2.	Main Chassis Assembly (Sheet 2 of 2)	7-5
5-1.	Test Equipment Required	5-1	7-3.	RANGE Switch Assembly	7-8
5-2.	Adjustments Required When Tubes Are Replaced	5-2	7-4.	Printed Circuit Board Assembly Part No. 400D-75G	7-9
5-3.	Left Side View of Voltmeter Chassis	5-4	7-5.	Printed Circuit Board Assembly Part No. 400D-75F	7-10
5-4.	Right Side View of Voltmeter Chassis	5-5	7-6.	Printed Circuit Board Assembly Part No. 400D-65C	7-12
5-5.	Trouble-Shooting Procedure	5-6			