



**PLEASE CHECK FOR CHANGE INFORMATION
AT THE REAR OF THIS MANUAL.**

**50M30
PROGRAMMABLE
DIGITAL
INPUT/OUTPUT
CARD**

INSTRUCTION MANUAL

**Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077**


Serial Number _____

070-3722-00
Product Group 75

First Printing OCT 1981
Revised JAN 1986

Copyright © 1981 Tektronix, Inc. All rights reserved.
Contents of this publication may not be reproduced in any
form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered
by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are
registered trademarks of Tektronix, Inc. TELEQUIPMENT
is a registered trademark of Tektronix U.K. Limited.

Printed in U.S.A. Specification and price change privileges
are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag,
or stamped on the chassis. The first number or letter
designates the country of manufacture. The last five digits
of the serial number are assigned sequentially and are
unique to each instrument. Those manufactured in the
United States have six unique digits. The country of
manufacture is identified as follows:



B000000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd., London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

TABLE OF CONTENTS

	Page
LIST OF ILLUSTRATIONS	ii
LIST OF TABLES	ii
OPERATORS SAFETY SUMMARY	iii
SERVICE SAFETY SUMMARY	v

WARNING

THE FOLLOWING SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED PERSONNEL ONLY. TO AVOID PERSONAL INJURY, DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.

Section 1 SPECIFICATION					
Instrument Description	1-1				
Standard Accessories	1-1				
Related Documents	1-1				
Performance Conditions	1-1				
Electrical Characteristics	1-2				
Environmental Characteristics	1-3				
Mechanical Characteristics	1-3				
Section 2 PREPARATION FOR USE					
External Power Considerations	2-1				
Front Panel Interface Cabling	2-1				
Input/Output Data Synchronization ...	2-1				
Buffered Trigger, Return Trigger, and Error Signals	2-2				
Front Panel Indicator Lights	2-2				
Function Card Installation	2-2				
Repackaging for Shipment	2-5				
Section 3 PROGRAMMING INFORMATION					
Introduction	3-1				
General Information	3-1				
Power-up Default and INIT Command Settings	3-1				
Command Summary	3-2				
Detailed Command List	3-3				
Status Bytes and Error Codes	3-7				
Programming Example	3-8				
Section 4 PERFORMANCE CHECK PROCEDURE					
Introduction	4-1				
Front Panel Connections	4-1				
Performance Check Interval	4-1				
Services Available	4-1				
Test Equipment Required	4-1				
Preliminary Procedure	4-3				
Section 5 THEORY OF OPERATION					
Circuit Description	5-1				
Memory and Decoders 	5-1				
Front Panel Interface 	5-2				
Section 6 MAINTENANCE					
Static-Sensitive Components	6-1				
General Maintenance	6-1				
Troubleshooting	6-1				
Section 7 REPLACEABLE ELECTRICAL PARTS					
Section 8 DIAGRAMS AND ILLUSTRATIONS					
Block Diagram					
Schematics					
Parts Location and Component Reference Charts					
Section 9 REPLACEABLE MECHANICAL PARTS					
EXPLODED VIEW					
ACCESSORIES					
CHANGE INFORMATION					

LIST OF ILLUSTRATIONS

Fig. No.		Page
2-1	External (user) power connections	2-1
2-2	Front panel (user) interface cable assembly	2-2
2-3	50M30 front panel interface connector. IDV (20A) and ODR (23A) are level sensitive, not edge sensitive	2-3
2-4	Timing diagrams for 50M30 data input/output synchronization	2-4
4-1	50M30 performance check test circuit	4-2
6-1	50M30 to MI/MX 5010 Interface connector pin assignments.	6-2

LIST OF TABLES

Table No.		Page
1-1	Electrical Characteristics	1-2
1-2	Environmental Characteristics	1-3
1-3	Mechanical Characteristics	1-3
4-1	List of Test Equipment Requirements	4-1
6-1	Relative Susceptibility to Static Discharge Damage	6-1