





OPERATING AND SERVICE MANUAL

MODEL 525A  
FREQUENCY CONVERTER

SERIALS PREFIXED: 048-

This manual applies directly to  Model 525A Frequency Converters having serial number prefix 048-. This manual with changes provided in the Appendix also applies to all previous models of the  Model 525A.

*Reproduced With Permission Courtesy Agilent Technologies, Inc.*

Copyright HEWLETT-PACKARD COMPANY 1959  
1501 PAGE MILL ROAD, PALO ALTO, CALIFORNIA, U.S.A.



## CONTENTS

SECTION I	GENERAL DESCRIPTION	Page
	1 - 1 General . . . . .	I - 1
	1 - 2 Damage in Transit . . . . .	I - 1
	1 - 3 Specifications . . . . .	I - 1
SECTION II	OPERATING INSTRUCTIONS	
	2 - 1 General . . . . .	II - 1
	2 - 2 Selection of Mixing Frequency . . . . .	II - 1
SECTION III	CIRCUIT OPERATION	
	3 - 1 General . . . . .	III - 1
	3 - 2 Circuit Operation . . . . .	III - 1
SECTION IV	MAINTENANCE	
	4 - 1 General . . . . .	IV - 1
	4 - 2 Adjusting Harmonic Generator Output . . . . .	IV - 1
	4 - 3 Adjusting the Balanced Mixer Drive . . . . .	IV - 2
	4 - 4 Adjusting Balance of the Balanced Mixer . . . . .	IV - 2
	4 - 5 Calibrating the Tuning Eye . . . . .	IV - 2
	4 - 6 Adjusting Harmonic Generator Input Capacity . . . . .	IV - 3
	4 - 7 Adjusting the Video Amplifier . . . . .	IV - 3
	4 - 8 Adjusting the 10.1 MC Trap . . . . .	IV - 4
SECTION V	TABLE OF REPLACEABLE PARTS	
	5 - 1 Table of Replaceable Parts . . . . .	V - 1