

Tektronix[®]
COMMITTED TO EXCELLENCE

Oservice sample File



INSTRUCTION MANUAL

Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077

Serial Number _____

TABLE OF CONTENTS

	Page		Page
SECTION 1 SPECIFICATION		SECTION 4 CALIBRATION (cont)	
Introduction	1-1	Services Available	4-1
Table 1-1, Electrical Characteristics		Test Equipment Required	4-1
		Calibration Equipment Alternatives	4-2
		Special Calibration Fixtures	4-2
SECTION 2 OPERATING INSTRUCTIONS		Test Instruments	4-2
Introduction	2-1	Accessories	4-2
Plug-In Insertion and Removal	2-1	Short-Form Procedure and Index	4-2
Controls and Connectors	2-1	Calibration Procedure	4-2
Basic Operation	2-1		
Preparation	2-1	SECTION 5 PARTS LISTS AND DIAGRAMS	
Step Attenuator Balance	2-2	Symbols and Reference Designators	5-1
Gain Check	2-2	Block Diagram	
General Operating Information	2-2	Component Board Locations	
Applying Signals	2-2	Amplifier Diagram	
Input Coupling	2-2	Electrical Parts List	
Deflection Factor	2-3	Mechanical Parts List	
Repackaging for Shipment	2-3		
		CHANGE INFORMATION	
SECTION 3 CIRCUIT DESCRIPTION			
Introduction	3-1		
Plug-In Logic	3-1		
Input Coupling	3-1		
Input Attenuator	3-1		
Amplifier	3-1		
		Abbreviations and symbols used in this manual are based on or taken directly from IEEE Standard 260 "Standard Symbols for Units", MIL-STD-12B and other standards of the electronics industry. Change information, if any, is located at the rear of this manual.	
SECTION 4 CALIBRATION			
Introduction	4-1		
Instrument Maintenance	4-1		