



Qservice - AFG5101 / AFG5501 Operators Sample - Qservice

**PLEASE CHECK FOR CHANGE INFORMATION
AT THE REAR OF THIS MANUAL.**

AFG 5101/AFG 5501
Programmable
Arbitrary/Function
Generator

INSTRUCTION MANUAL

Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077
070-6759-00
Product Group 75

Serial Number _____

First Printing MAY 1988

Copyright © 1988 Tektronix, Inc. All rights reserved.
Contents of this publication may not be reproduced in any
form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are
covered by U.S. and foreign patents and/or pending
patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are
registered trademarks of Tektronix, Inc. TELEQUIPMENT
is a registered trademark of Tektronix U.K. Limited.

Printed in U.S.A. Specification and price change
privileges are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag,
or stamped on the chassis. The first number or letter
designates the country of manufacture. The last five digits
of the serial number are assigned sequentially and are
unique to each instrument. Those manufactured in the
United States have six unique digits. The country of
manufacture is identified as follows:

| | |
|---------|---|
| B000000 | Tektronix, Inc., Beaverton, Oregon, USA |
| 100000 | Tektronix Guernsey, Ltd., Channel Islands |
| 200000 | Tektronix United Kingdom, Ltd., London |
| 300000 | Sony/Tektronix, Japan |
| 700000 | Tektronix Holland, NV, Heerenveen, The Netherlands |

Qservice - AFG5101 / AFG5101 Operators Sample - Qservice

TABLE OF CONTENTS

| | |
|--------------------------|-----|
| List of Illustrations | iii |
| List of Tables | iii |
| Operators Safety Summary | iv |
| Servicing Safety Summary | v |

Section 1 SPECIFICATION

| | |
|--|------|
| Introduction | 1-1 |
| Instrument Description | 1-1 |
| Instrument Options | 1-1 |
| Standard Accessories | 1-1 |
| IEEE 488 (GPIB) Function Capability | 1-1 |
| Electrical Characteristics | 1-2 |
| Performance Conditions | 1-2 |
| Waveforms, Operating Modes, and Parameters | 1-3 |
| Frequency Characteristics | 1-6 |
| General Output Characteristics | 1-7 |
| Output Characteristics | 1-8 |
| Internal Trigger | 1-11 |
| Arbitrary Waveform Characteristics | 1-12 |
| Frequency Sweep | 1-14 |
| Synthesizer (Option 02) | 1-14 |
| Inputs and Outputs | 1-15 |
| GPIB Characteristics | 1-17 |
| Miscellaneous Electrical Characteristics | 1-18 |
| Source Power Requirements | 1-18 |
| Environmental Characteristics | 1-19 |
| Physical Characteristics | 1-20 |
| Mechanical | 1-20 |

Section 2 OPERATING INSTRUCTIONS

| | |
|---|-----|
| Introduction | 2-1 |
| Preparation for Use | 2-1 |
| Installation and Removal (AFG 5101 Only) | 2-1 |
| Power Cords (AFG 5501 Only) | 2-1 |
| Line Voltage Selection/Fuse Replacement (AFG 5501 Only) | 2-2 |
| Turn-On Procedure | 2-2 |
| IEEE 488 (GPIB) Connector (AFG 5501 Only) | 2-3 |

| | |
|--|------|
| Repackaging for Shipment | 2-3 |
| Controls, Connectors, and Display | 2-4 |
| General Information | 2-4 |
| Display Window, Changing Settings | 2-4 |
| Power-On Sequence | 2-5 |
| GPIB Indicators | 2-5 |
| Controls and Connectors | 2-5 |
| Operating Considerations | 2-12 |
| General Operating Information | 2-12 |
| Memory | 2-12 |
| Output Connections | 2-12 |
| Impedance Matching | 2-12 |
| Displayed Errors | 2-12 |
| Store/Recall Settings | 2-13 |
| Special Functions | 2-13 |
| Stepping a Parameter Level | 2-15 |
| Generating a Standard Output Function | 2-17 |
| Modulation | 2-17 |
| Offset | 2-17 |
| Range Lock | 2-17 |
| Frequency Lock | 2-17 |
| Synthesizer | 2-17 |
| Storing an Arbitrary Waveform | 2-20 |
| Enabling/Disabling ADRS Auto-Increment | 2-21 |
| Using Autoline | 2-21 |
| Arbitrary Waveform Programming Example | 2-21 |
| Generating Arbitrary Waveform Output | 2-23 |
| Arbitrary Waveform Generation Example | 2-23 |
| Using the Sweep Generator | 2-24 |
| Markers | 2-25 |

Section 3 PROGRAMMING

| | |
|-------------------------------------|------|
| Introduction | 3-1 |
| Commands | 3-2 |
| Command Functional Groups | 3-2 |
| Control/Command Associations | 3-8 |
| Detailed Command Descriptions | 3-8 |
| Detailed Command List | 3-10 |
| Messages and Communication Protocol | 3-35 |
| Command Separator | 3-35 |

TABLE OF CONTENTS (Cont)

Section 3 PROGRAMMING (Cont)

- Address and Message Terminator Selection 3-35
- Formatting a Message 3-35
- Number Formats 3-36
- Rounding of Numeric Arguments 3-36
- Message Protocol 3-36
- Multiple Messages 3-37
- Instrument Response to IEEE-488 Interface Messages 3-37
- Remote-Local Operation 3-38
 - Local State 3-39
 - Local Without Lockout State 3-39
 - Remote State 3-39
 - Remote With Lockout State 3-39
- Status and Error Reporting 3-39
 - Sending Interface Control Messages 3-41
- Power-On Sequences and Default Settings 3-42
- Talker-Listener Programs 3-44

WARNING

The following servicing instructions are for use by qualified personnel only. To avoid personal injury, do not perform any servicing other than that contained in operating instructions unless you are qualified to do so. Refer to Operators Safety Summary prior to performing any service.

Section 4 MAINTENANCE

- Introduction 4-1
- Calibration/Adjustment 4-1
- Battery Replacement 4-1
- Internal Fuse Replacement (AFG 5501) 4-1
- Fuse Replacement 4-2

Section 5 OPTIONS

Section 6 REPLACEABLE PARTS

Qservice - AFG5101 / AFG5501 Operators Sample Qservice

LIST OF ILLUSTRATIONS

Fig.
No.

- | | | | | | |
|-----|---|------|-----|--|------|
| 1-1 | Trigger to waveform timing, and waveform phase relationships. | 1-4 | 2-7 | Arbitrary waveform example final results. | 2-22 |
| 1-2 | Arbitrary HOLD timing diagram. | 1-16 | 3-1 | Command associations to controls. | 3-9 |
| 2-1 | Power cords. | 2-1 | 3-2 | Relationship between arbitrary waveform output, ARBHOLD, and the RATE clock. | 3-14 |
| 2-2 | Line voltage selection/fuse replacement. | 2-2 | 3-3 | AUTOLINE example. | 3-17 |
| 2-3 | Rear panel GPIB connector. | 2-3 | 3-4 | Definition of STB bits. | 3-40 |
| 2-4 | Front panel numeric setting change. | 2-4 | 3-5 | ASCII and IEEE (GPIB) Code Chart. | 3-43 |
| 2-5 | Controls and connectors. | 2-6 | | | |
| 2-6 | SPCL 250 example. | 2-14 | | | |

LIST OF TABLES

Table
No.

- | | | | | | |
|------|--|------|------|---------------------------------------|------|
| 1-1 | Interface Function Subsets | 1-2 | 1-14 | Environmental | 1-19 |
| 1-2 | Waveforms, Operating Modes, and Parameters | 1-3 | 1-15 | Mechanical | 1-20 |
| 1-3 | Frequency Characteristics | 1-6 | 2-1 | Power-On Settings | 2-5 |
| 1-4 | General Output Characteristics | 1-7 | 2-2 | Front Panel Error Codes | 2-13 |
| 1-5 | Output Characteristics | 1-8 | 2-3 | Special Functions | 2-13 |
| 1-6 | Internal Trigger | 1-11 | 2-4 | Generating a Standard Output Function | 2-17 |
| 1-7 | Arbitrary Waveform Characteristics | 1-12 | 2-5 | Storing an Arbitrary Waveform | 2-20 |
| 1-8 | Frequency Sweep | 1-14 | 2-6 | Using the Sweep Generator | 2-22 |
| 1-9 | Synthesizer | 1-14 | 3-1 | Error Query and Status Information | 3-40 |
| 1-10 | Inputs and Outputs | 1-15 | 3-2 | Front Panel Error Codes | 3-41 |
| 1-11 | GPIB Characteristics | 1-17 | 3-3 | Power-On Default Settings | 3-42 |
| 1-12 | Miscellaneous Electrical Characteristics | 1-18 | | | |
| 1-13 | Source Power Requirements | 1-18 | | | |