

# PHILIPS



MAT 219

**Service Manual**

## **15 MHz. Dual channel oscilloscope PM 3207**

9444 032 07..1



## CONTENTS

1.	Characteristics	4
1.1.	Environmental capabilities	6
1.2.	Optional accessories	6
2.	Circuit descriptions	7
2.1.	Description of the block diagram	7
2.1.1.	Vertical deflection	7
2.1.2.	Triggering and horizontal deflection	12
2.1.3.	CRT Display section	12
2.1.4.	Power supply	13
2.2.	Circuit description	14
2.2.1.	Vertical deflection	14
2.2.2.	Horizontal deflection and time base	18
2.2.3.	CRT Display section	22
2.2.4.	Power supply	22
3.	Dismantling the instrument	23
3.1.	Precautions	23
3.2.	Removing the top-cover	23
3.2.1.	Remounting the top-cover	23
3.3.	Removing the power supply-unit	23
3.3.1.	Remounting the power supply-unit	24
3.4.	Removing the front-cover with control unit	24
3.5.	Replacing the CRT	24
4.	Checking and adjusting	28
4.1.	General	28
4.2.	Table of adjustments	30
4.3.	Survey of measuring points	32
4.4.	Component location list	36
5.	Parts lists and diagrams	38
5.1.	Adaption of mains (line) voltage	51