



TEKTRONIX®

**7313/R7313
OSCILLOSCOPE**

WITH OPTIONS

OPERATORS

INSTRUCTION MANUAL

Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97005

Serial Number _____

TABLE OF CONTENTS

	Page
	ii
	iii
SECTION 1	OPERATING INSTRUCTIONS
	Preliminary Operation 1-1
	Safety Information 1-1
	Operating Voltage 1-1
	Plug-In Units 1-3
	Controls and Connectors 1-3
	External 1-3
	Internal 1-6
	Familiarization Procedure 1-6
	Set-Up Information 1-6
	Display Controls 1-8
	Vertical and Horizontal System Controls 1-8
	Calibrator and Triggering Controls 1-9
	Storage Controls 1-10
	General Operating Information 1-11
	Intensity Controls 1-11
	Display Focus 1-12
	Graticule 1-12
	Beamfinder 1-12
	Vertical Mode 1-12
	Trigger Source 1-13
	Readout (Deleted by Option 1) 1-14
	Storage Operation 1-14
	Calibrator 1-16
	Signal Outputs 1-16
	Remote Single Sweep Reset (Delete with Option 7) 1-17
	Display Photography 1-17
	X-Y Operation 1-17
	Intensity Modulation 1-18
	Raster Display 1-18
	Applications 1-18
SECTION 2	SPECIFICATION
	General 2-1
	Standard Accessories 2-7
	System Specifications 2-7
SECTION 3	RACKMOUNTING INSTRUCTIONS
	Instrument Dimensions 3-1
	Rack Dimensions 3-1
	Slide-Out Tracks 3-1
	Mounting Procedure 3-2
	Removing Or Installing The Instrument 3-4
	Slide-Out Track Lubrication 3-4
SECTION 4	INSTRUMENT OPTIONS
	Option 1 4-1
	Option 3 4-1
	Option 5 (Rackmount Instrument only) 4-1
	Option 7 4-1

LIST OF ILLUSTRATIONS

Figure		Page
	Frontispiece	
1-1	Location of voltage selector, spare jumper, and alternate fuse in power unit (7313 shown).	1-2
1-2	Front-panel controls and connectors.	1-4
1-3	Rear-panel controls and connectors.	1-5
1-4	Location and function of internal selectors.	1-7
1-5	Definition of measurement lines on the 7313/R7313 graticules.	1-12
1-6	Location of the readout on the crt identifying the originating plug-in compartment and channel.	1-14
3-1	Slide-out track assembly.	3-1
3-2	Vertical mounting position of the left stationary section and location of the thumbscrew securing hole. These dimensions also apply to the right front rail.	3-2
3-3	Details for mounting stationary sections.	3-3
3-4	Installing and removing the instrument.	3-4
3-5	Adjusting the slide-out tracks for smooth sliding action.	3-5
3-6	R7313 dimensional drawing.	3-6

LIST OF TABLES

Table	Page
1-1 Color Coding of Cord Conductors	1-1
1-2 Regulating Range and Fuse Data	1-2
2-1 Electrical Specifications	2-1
2-2 Environmental Specifications	2-7
2-3 Physical Specifications	2-7
2-4 System Vertical Specifications	2-8
4-1 Option Information Locator	4-1

NOTE

Refer to the 7313/R7313 Service manual for circuit description, maintenance, calibration, diagrams, and parts replacement information.