

---

**TEK** 200  
SERIES

---

Part No. 070-8097-00  
Product Group 40

---

**THE  
222PS**

PowerScout  
Power Systems  
Oscilloscope

**Operator  
Manual**

*Please check for CHANGE INFORMATION  
at the rear of this manual.*

---

First Printing NOV 1990  
Revised MAR 1991

**Tektronix**<sup>®</sup>  
COMMITTED TO EXCELLENCE

### Instrument Serial Numbers

Each instrument manufactured by Tektronix has a serial number on a panel insert or tag, or stamped on the chassis. The first letter in the serial number designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits. The country of manufacture is identified as follows:

B010000	Tektronix, Inc., Beaverton, Oregon, USA
E200000	Tektronix United Kingdom, Ltd., London
J300000	Sony/Tektronix, Japan
H700000	Tektronix Holland, NV, Heerenveen, The Netherlands

Instruments manufactured for Tektronix by external vendors outside the United States are assigned a two digit alpha code to identify the country of manufacture (e.g., JP for Japan, HK for Hong Kong, etc.).

Tektronix, Inc., P.O. Box 500, Beaverton, OR 97077

Copyright © Tektronix, Inc., 1990, 1991. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. The following are registered trademarks:

TEKTRONIX, TEK, TEKPROBE, SCOPEMOBILE and



Printed in U.S.A. Specification and price change privileges are reserved.

# TABLE OF CONTENTS

LIST OF ILLUSTRATIONS .....	v
LIST OF TABLES .....	vii
OPERATORS SAFETY SUMMARY .....	ix
<b>Section 1 YOUR NEW OSCILLOSCOPE</b>	
1.1 FEATURES .....	1-1
1.2 PERFORMANCE CHARACTERISTICS SUMMARY .....	1-2
1.3 STANDARD ACCESSORIES .....	1-5
1.4 OPTIONAL ACCESSORIES .....	1-5
<b>Section 2 GETTING STARTED</b>	
2.1 SAFETY .....	2-1
2.2 BATTERY-CHARGER ADAPTER .....	2-1
2.3 EXTERNAL SUPPLY VOLTAGE .....	2-1
2.4 PREPARATION FOR FIRST TIME USE .....	2-2
2.5 START-UP .....	2-3
2.6 TIME OUT .....	2-3
2.7 VIEWING A SIGNAL QUICKLY .....	2-4
<b>Section 3 CONTROLS AND INDICATORS</b>	
3.1 CONTROL REFERENCE TABLES .....	3-1
3.2 ON-SCREEN READOUT LOCATIONS .....	3-6
3.3 EXPANDED CONTROLS INFORMATION .....	3-8
3.4 CRT DISPLAY, MENU BUTTONS, AND POWER .....	3-8
3.5 VERTICAL CONTROLS .....	3-9
3.6 HORIZONTAL CONTROLS .....	3-12
3.7 TRIGGER CONTROLS .....	3-13
3.8 TOP PANEL BUTTONS .....	3-15
3.9 REAR PANEL CONTROLS AND CONNECTORS .....	3-19
3.10 PROBE CONNECTORS .....	3-20

**Section 4 BASIC OPERATION**

4.1 TURN ON ..... 4-1

4.2 AUTO SETUP ..... 4-1

4.3 MENU SELECTION ..... 4-2

4.4 STORE OR NONSTORE DISPLAY  
MODE SELECTION ..... 4-3

4.5 CLEARING MENU, SAVED WAVEFORM, AND  
STORE MODE DISPLAYS ..... 4-3

4.6 CHANNEL SELECTION ..... 4-3

4.7 VERTICAL INPUT COUPLING ..... 4-4

4.8 VOLTS/DIV SCALING ..... 4-5

4.9 VERTICAL POSITIONING ..... 4-5

4.10 VARIABLE VOLTS/DIV CONTROL ..... 4-6

4.11 CH1 AND CH2 INVERTED DISPLAY ..... 4-6

4.12 SEC/DIV SCALING ..... 4-7

4.13 HORIZONTAL POSITIONING ..... 4-8

4.14 X10 MAGNIFICATION ..... 4-8

4.15 TRIGGER LEVEL SETTING ..... 4-9

4.16 TRIGGER SLOPE SELECTION ..... 4-9

4.17 TRIGGER MODE SETTING ..... 4-10

4.18 TRIGGER SOURCE SELECTION ..... 4-11

4.19 MOTOR TRIGGER ..... 4-12

4.20 SAVING WAVEFORMS ..... 4-13

4.21 RECALLING SAVED WAVEFORMS ..... 4-14

4.22 SAVING FRONT-PANEL SETUPS ..... 4-15

4.23 RECALLING FRONT-PANEL SETUPS ..... 4-17

4.24 CLEARING SAVED FRONT-PANEL SETUPS .. 4-18

4.25 SETTING TRIGGER POSITION ..... 4-18

4.26 ACQUISITION MODE SELECTION ..... 4-20

4.27 X-Y OR Y-T DISPLAY MODE SELECTION ..... 4-21

4.28 READOUT ON OR OFF ..... 4-21

4.29 AUTO TIMEOUT ..... 4-22

4.30 SETTING BAUD RATE ..... 4-24

4.31 ACTIVATING THE LOCAL MODEM ..... 4-25

4.32 SETTING PROBE CONFIGURATIONS ..... 4-27

4.33 DISPLAY XY ROTATION ALIGNMENT ..... 4-29

**Section 4 BASIC OPERATION (cont.)**

4.34	PROBE CALIBRATION .....	4-30
4.35	SELF CALIBRATION .....	4-31
4.36	FIRMWARE VERSION IDENTIFICATION .....	4-34

**Section 5 MAKING MEASUREMENTS**

5.1	SIGNAL TRACING WITH AUTO SETUP .....	5-1
5.2	GRATICULE MEASUREMENTS .....	5-1
5.3	FLOATING MEASUREMENTS .....	5-8
5.4	SINGLE SWEEP OPERATION .....	5-10

**Section 6 DETAILED OPERATING INFORMATION**

6.1	AUTO SETUP .....	6-1
6.2	PROBES .....	6-2
6.3	STORE AND NONSTORE DISPLAY MODES ...	6-5
6.4	VERTICAL INPUT COUPLING .....	6-5
6.5	DEFAULT ACQUISITION MODES .....	6-6
6.6	TRIGGER MODES .....	6-10
6.7	TRIGGER SOURCE .....	6-12
6.8	MOTOR TRIGGER FUNCTION .....	6-13
6.9	TRIGGER POSITION .....	6-15
6.10	TRIGGER LEVEL/AUTO LVL: PUSH .....	6-15
6.11	ACQUISITION MODES .....	6-16
6.12	MAINTENANCE .....	6-17
6.13	REPACKAGING FOR SHIPMENT .....	6-17

**Section 7 OPTIONS AND ACCESSORIES**

7.1	INTRODUCTION .....	7-1
7.2	STANDARD ACCESSORIES .....	7-1
7.3	OPTIONAL ACCESSORIES .....	7-1
7.4	OPTIONS .....	7-2

**Section 8 PERFORMANCE SPECIFICATIONS**

8.1	INTRODUCTION .....	8-1
8.2	RECOMMENDED PERFORMANCE CHECK SCHEDULE .....	8-1

**Appendix A CHECKING YOUR INSTRUMENT'S PERFORMANCE**

A.1 INTRODUCTION .....	A-1
A.2 TEST EQUIPMENT REQUIRED .....	A-1
A.3 PREPARATION .....	A-4
A.4 INDEX TO PERFORMANCE CHECKS .....	A-6
A.5 DISPLAY CHECKS .....	A-7
A.6 VERTICAL .....	A-8
A.7 HORIZONTAL .....	A-14
A.8 TRIGGER .....	A-16

**Appendix B BATTERY INFORMATION**

B.1 INTRODUCTION .....	B-1
B.2 FIRST TIME BATTERY OPERATION .....	B-2
B.3 TIPS ON BATTERY CARE .....	B-2
B.4 ALTERNATE METHOD FOR BATTERY CHARGING .....	B-4
B.5 BATTERY REPLACEMENT .....	B-4

**INDEX**

**CHANGE INFORMATION**

## LIST OF ILLUSTRATIONS

Figure		Page
2-1	External Power Input .....	2-2
3-1	Front-Panel controls .....	3-2
3-2	Top-Panel buttons .....	3-4
3-3	Rear Panel .....	3-5
3-4	On-screen readout locations .....	3-6
3-5	CRT display, menu buttons, and power .....	3-8
3-6	Probes and Vertical controls .....	3-10
3-7	Horizontal controls .....	3-12
3-8	Trigger controls .....	3-14
3-9	Top-Panel buttons .....	3-16
3-10	Rear Panel .....	3-19
3-11	Side view showing probe connectors (battery compartment cover removed) .....	3-21
4-1	ALIGN XY test pattern .....	4-30
5-1	Peak-to-peak voltage measurement .....	5-2
5-2	Voltage with respect to ground .....	5-3
5-3	Sinusoidal waveform measurements .....	5-4
5-4	Typical indoor surge waveform .....	5-5
5-5	Typical outdoor surge waveform (open circuit) .....	5-6
5-6	Time measurement .....	5-7
5-7	Rise Time measurement .....	5-8
5-8	Simplified block diagram showing isolation and voltage ratings .....	5-9
6-1	Probes and probe accessories .....	6-4
6-2	Motor drive signals separated by a low region .....	6-14
6-3	Motor drive signals separated by a high region .....	6-14

Figure		Page
8-1	Maximum normal-mode voltage versus frequency derating curve .....	8-11
8-2	Maximum common-mode voltage versus frequency derating curve (See Section 5.3 for discussion.) .....	8-11
A-1	Trigger jitter check .....	A-21


Qservice sample file



## LIST OF TABLES

Table		Page
1-1	Key Performance Characteristics .....	1-2
3-1	Front-Panel Controls Quick Reference .....	3-2
3-2	Top-Panel Controls Quick Reference .....	3-4
3-3	Rear-Panel Controls Quick Reference .....	3-5
3-4	On-Screen Readouts .....	3-7
4-1	Vertical DC Accuracy with Probes .....	4-31
6-1	AUTO SETUP Defaults .....	6-2
6-2	Default Acquisition Modes .....	6-7
6-3	Repetitive Store Fill .....	6-10
6-4	AUTO LVL Trigger Interval Limits .....	6-11
8-1	Electrical Characteristics .....	8-2
8-2	Environmental Specifications .....	8-12
8-3	Mechanical Specifications .....	8-14
A-1	Test Equipment Required .....	A-2
A-2	VOLTS/DIV Accuracy Settings .....	A-2

## Conventions Used in This Manual

Terms in upper-case bold type (such as **SOURCE**) refer to a control, connector, or indicator. Controls may also be represented by an icon (such as ).

The initial letters of main menus are capitalized (such as Trig Source).

References to submenus and menu selections are in upper-case type (such as MOTOR TRIG).

This manual includes three types of supplemental information.

### NOTE

*Notes include information to help you use your oscilloscope more efficiently.*



*Caution statements call attention to practices that could cause damage to the instrument.*

### WARNING

*These statements call attention to practices that could lead to personal injury or death.*