

2432 PROGRAMMERS REFERENCE GUIDE

*Please Check for
CHANGE INFORMATION
at the Rear of This Manual*

First Printing JUNE 1987

Tektronix[®]
COMMITTED TO EXCELLENCE

Copyright © 1987 Tektronix, Inc. All rights reserved.
Contents of this publication may not be reproduced in any
form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered
by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are
registered trademarks of Tektronix, Inc.

Printed in U.S.A. Specification and price change privileges
are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag,
or stamped on the chassis. The first number or letter
designates the country of manufacture. The last five digits
of the serial number are assigned sequentially and are
unique to each instrument. Those manufactured in the
United States have six unique digits. The country of
manufacture is identified as follows:

B00000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd., London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

Contents

	<i>Page</i>
Illustrations	vi
Tables	vi
Operators Safety Summary	vii
1 Introduction	
How to Use this Manual	1-1
Tips for New Users	1-2
2 Establishing GPIB Communication	
Setting the GPIB Mode.....	2-1
Talk-Only	2-1
Listen-Only.....	2-2
Talk-Listen	2-2
Devices	2-3
Off Bus.....	2-3
Setting the GPIB Message Terminator	2-3
Which terminator should you choose?	2-4
Setting the GPIB Primary Address.....	2-4
Sample Controller Program	2-5
Debugging the Interface When it Doesn't Work	2-6
GPIB Status Menu	2-6
What Do the GPIB Status LED's Mean?	2-7
3 How to Write Programs	
Sending a Command to the 2432	3-1
Building Commands	3-1
Composing Messages.....	3-3
Terminating Messages.....	3-3
Asking the 2432 a Question	3-4
Using PATH Mode	3-4
Using LONG Mode.....	3-5
How to Use Service Requests (SRQs)	3-5
Programming With SRQs.....	3-6
Programming Without SRQs	3-8
Making Measurements With the 2432	3-9
Using the WPE Feature.....	3-9
Making Custom Measurements.....	3-13
How to Use the 2432 Sequencing Capabilities	3-15
Constructing a Sequence.....	3-15
Recalling a Sequence.....	3-18

	<i>Page</i>
Removing Unwanted Sequences.....	3-18
Using the Sequencer.....	3-19
Sending and Receiving Sequences	3-20
Making Printer or Plotter Copies.....	3-23
Making Copies Without a Controller	3-23
Making Copies With a Controller.....	3-25
Save-On-Delta Hard Copies	3-27
Special HC100 Mode	3-27
How to Save Instrument Settings	3-28
Power-up Default Setups.....	3-28
Using a Controller	3-29
Using the Sequencer.....	3-30
Using Group Execute Trigger	3-31
4 Debugging Your Programs	
Familiarization	4-1
Interacting With the Display.....	4-1
Character Update Rate.....	4-2
Using the 2432 as a Bus Monitor	4-2
A GPIB Commands	
GPIB Commands.....	A-1
Vertical Commands.....	A-1
Trigger Commands.....	A-4
Horizontal Commands.....	A-10
Acquisition Commands.....	A-12
Saveref Commands	A-14
Display Commands.....	A-16
Cursor Commands.....	A-18
Automatic Feature Commands.....	A-21
Sequencer Commands	A-26
Output Commands.....	A-30
Miscellaneous Commands.....	A-31
Waveform Commands.....	A-34
Waveform Data Commands.....	A-40
Service Request Commands.....	A-43
Calibration and Diagnostic Commands.....	A-45
B Discussion on Waveforms	
Discussion on Waveforms.....	B-1
Doing a Waveform Transfer	B-1
From the 2432 to a Controller	B-1
From the Controller to the 2432	B-2
From 2432 to 2432	B-2

	<i>Page</i>
Waveform Data Formats	B-3
Data Point Representation.....	B-4
ASCII Format Encoding	B-4
Binary Formats.....	B-5
Scaling the Data Points	B-9
Sample Conversion to Volts	B-10
Waveform Acquisition and Conversion Programming Example.....	B-11

C *Event Tables*

Event Tables.....	C-1
2432 Status Bytes.....	C-1
Command Error Events.....	C-2
Execution Error Events.....	C-3
Internal Errors.....	C-4
System Messages	C-4
User Request Events.....	C-5
Probe Identify Events	C-5
Operation Complete Events	C-6
Execution Warning.....	C-6
Device Dependent Message.....	C-8
Fatal Error.....	C-8

D *GPIB Concepts*

GPIB Concepts.....	D-1
Mechanical	D-1
Allowable Configurations	D-1
Restrictions.....	D-1
Electrical Elements.....	D-2
Functional Elements.....	D-2
Acceptor Handshake (AH).....	D-3
Source Handshake (SH).....	D-3
Listener (L) and Listener Extended (LE).....	D-3
Talker (T) and Talker Extended (TE).....	D-3
Device Clear (DC).....	D-3
Device Trigger (DT).....	D-3
Remote/Local (RL).....	D-4
Service Request (SR).....	D-4
Parallel Poll (PP).....	D-4
Controller (C).....	D-4
Instrument Addresses	D-4
Primary Address.....	D-4
Listen Address.....	D-5
Talk Address	D-5
Secondary Address.....	D-5
GPIB Buses.....	D-6
Data Bus.....	D-6
Management Bus.....	D-7
Handshake Bus.....	D-8

	Page
GPIB Communication Protocol.....	D-8
Controllers	D-8
Talkers	D-9
Listeners	D-10
Universal Commands	D-10
Device Clear (DCL).....	D-10
Local Lockout (LLO).....	D-10
Serial Poll Disable (SPD).....	D-11
Serial Poll Enable (SPE).....	D-11
Unlisten (UNL)	D-11
Untalk (UNT).....	D-11
Addressed Commands.....	D-11
Group Execute Trigger (GET)	D-12
Go To Local (GTL)	D-12
Selected Device Clear (SDC)	D-12
Take Control (TCT)	D-12
Serial Polling.....	D-12
Status Bytes.....	D-13
Requesting Service	D-13
Conducting Serial Polls	D-13

E Init Settings and Power Up States

Init Settings and Power Up States	E-1
---	-----

F ASCII and 2432 Character Characters

ASCII and 2432 Character Characters	F-1
---	-----

G Answers to Common Questions

Answers to Common Questions.....	G-1
Who Can I Call for Help?.....	G-1
How Do I Unlock the Front Panel?.....	G-1
What Does a 05 (FFh) in My Data Stream Mean?	G-1
How Do I Get Just the Answer From a 2432 Query?	G-1
How Do I Hear All SRQ's and Event Codes?	G-1
Can I Run Self-Cal From a Controller?	G-2
How Can I Get the Most Recent GPIB Related Status?.....	G-2
How Do I Get All the Measurements at Once?.....	G-2
How Do I Clear the Screen?	G-2
How Do I Clear One Line of Text?	G-2
How Do I Write Text to the Screen?.....	G-2
How Do I Write My Own Menus and Handle Them?	G-3
Why Do I Keep Getting Event 459, SRQ Pending?.....	G-3
How Do I Send a Sequence From One 2432 to Another?.....	G-3
How Do I Print Out a Status, Help, or Snapshot Screen?.....	G-3
Why Does the Acquisition Restart When I Send Certain Commands?.....	G-3

	<i>Page</i>
Why Doesn't the Waveform I Sent to the 2432 Look Like the One I Took Out?	G-4
Why are the Abbreviations of Symbols on the 2432 Not the Same as Other Tektronix Oscilloscopes	G-4
Why Would I Use the INIT Command?	G-4
Do Sequences Go Away When I Turn Power Off?	G-4
Can I Access a Step in the Middle of a Sequence?	G-4
Why Do I Only Get Part of the Response to a SET? Query?	G-4
How Can I Tell When a Command Has Been Executed?	G-5
H 2432 Specific Information	
2432 Specific Information	H-1
Talked With Nothing to Say	H-1
Accepting Numbers	H-1
Accepting Characters	H-1
I/O Buffer Structure	H-2
Power-Up Sequence of the 2432	H-2
I How to Use Fast Transmit Mode	
How to Use Fast Transmit Mode	I-1
How to Set Up Fast Transmit	I-1
Potential Traps	I-2
Controller Program Hangs	I-2
2432 Hangs	I-3
Fast Transmit Transfer Rates	I-4
Some Points to Remember	I-5
J Example Programs	
Example Programs	J-1
Talker-Listener Program for HP Basic	J-1
Talker-Listener Program for IBM Basic	J-2
Pulse Counting Program	J-3
Extended Accuracy Timing Measurement Program	J-5

Index

Illustrations

Figure	Page
D-1 GPIB connector	D-2
D-2 GPIB Buses	D-6

Tables

Table	Page
B-1 ASCII Waveform Transfer	B-5
B-2 Binary Waveform Transfer	B-7
B-3 Partial Binary Waveform Transfer	B-9