



Qservice - SAMPLE - Qservice

PLEASE CHECK FOR CHANGE INFORMATION
AT THE REAR OF THIS MANUAL.

**2445 / 2465
OPTION 10
GPIB OPTION
OPERATORS**

INSTRUCTION MANUAL

Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077
070-4633-00
Product Group 38

Serial Number _____

First Printing SEP 1983
Revised OCT 1985

Copyright © 1983 Tektronix, Inc. All rights reserved.
Contents of this publication may not be reproduced in any
form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered
by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are
registered trademarks of Tektronix, Inc. TELETYPE EQUIPMENT
is a registered trademark of Tektronix U.K. Limited.

Printed in U.S.A. Specification and price change privileges
are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag,
or stamped on the chassis. The first number or letter
designates the country of manufacture. The last five digits
of the serial number are assigned sequentially and are
unique to each instrument. Those manufactured in the
United States have six unique digits. The country of
manufacture is identified as follows:

B000000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd., London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

TABLE OF CONTENTS

	Page		Page
LIST OF ILLUSTRATIONS	ii	SECTION 4 CONTROLLING OSCILLOSCOPE	
LIST OF TABLES	ii	FUNCTIONS OVER THE GPIB (cont)	
OPERATORS SAFETY SUMMARY	iii	REMOTE-LOCAL OPERATING	
SECTION 1 SPECIFICATION		STATES	4-13
INTRODUCTION	1-1	Local State (LDOCS)	4-13
STANDARD ACCESSORIES	1-1	Local With Lockout State (LWLS) ..	4-13
STANDARD FUNCTIONS, FORMATS, AND FEATURES	1-1	Remote State (REMS)	4-13
PERFORMANCE CONDITIONS	1-2	Remote With Lockout State (RWLS)	4-14
SECTION 2 CONTROLS, CONNECTORS, AND INDICATORS		INSTRUMENT RESPONSE TO	
FRONT-PANEL CONTROLS	2-1	INTERFACE MESSAGES	4-14
REAR PANEL	2-1	Local Lockout (LLO)	4-14
INDICATORS	2-1	Remote Enable (REN)	4-14
READOUT DISPLAYS	2-2	Go To Local (GTL)	4-14
SECTION 3 GPIB PREPARATION FOR USE		My Listen and My Talk Addresses	
POWER-UP SEQUENCE	3-1	(MLA AND MTA)	4-14
Kernel Tests	3-1	Unlisten and Untalk (UNL and UNT)	4-14
Confidence Test	3-1	Interface Clear (IFC)	4-14
Successful Power-Up Sequencing ..	3-1	Device Clear (DCL)	4-14
Unsuccessful Power-Up Sequencing	3-1	Selected Device Clear (SDC)	4-14
POWER-DOWN SEQUENCE	3-1	Serial Poll Enable and Disable	
SECTION 4 CONTROLLING OSCILLOSCOPE FUNCTIONS OVER THE GPIB		(SPE AND SPD)	4-14
INTRODUCTION	4-1	PROGRAMMING	4-15
GPIB PARAMETER SELECTION	4-1	Command Handler	4-15
Primary Address	4-1	Service-Request Handler	4-15
Input End-of-Message Terminator and Talk/Listen Mode	4-1	Sample Program A	4-15
MESSAGES AND COMMUNICATION		Sample Program B	4-16
PROTOCOL	4-2	Using SETtings? and LLSet? Queries	4-17
Commands	4-2	Sample Program C	4-17
Headers	4-2	Sample Program D	4-18
Arguments	4-2	Front Panel Lockout	4-18
Command Separator	4-3	Reset Under GPIB Control	4-19
Message Terminator	4-3	APPENDIX A GPIB COMMAND REFERENCE	A-1
Command Formatting	4-3	APPENDIX B STATUS AND ERROR REPORTING	B-1
Numeric Arguments	4-3	APPENDIX C MESSAGE COMMAND CHARACTER TRANSLATIONS	C-1
GPIB COMMAND LISTS	4-4	APPENDIX D SWEEP SPEED COMMAND CONSIDERATIONS	D-1
		APPENDIX E LLMESSAGE COMMAND CHARACTER TRANSLATIONS	E-1
		CHANGE INFORMATION	

LIST OF ILLUSTRATIONS

Figure		Page
	The 2445 Option 10 Oscilloscope	iv
	The 2465 Option 10 Oscilloscope	iv
2-1	Rear-Panel GPIB CONNECTOR	2-1
2-2	GPIB STATUS indicators	2-2

LIST OF TABLES

Table		Page
1-1	ANSI/IEEE Std 488-1978 (GPIB) Functions	1-2
1-2	Specific Features Implemented	1-2
1-3	Specific Format Choices	1-2
1-4	Option 10 Electrical Characteristics	1-3
1-5	Option 10 Mechanical Characteristics	1-3
4-1	Numeric Argument Format for GPIB Commands	4-3
4-2	Vertical Commands	4-4
4-3	Horizontal Commands	4-6
4-4	Trigger Commands	4-7
4-5	Delay and Delta Commands	4-9
4-6	System Commands	4-10
4-7	Calibration and Diagnostic Commands	4-12
A-1	GPIB Command Summary	A-1
B-1	Status Event and Error Categories	B-1
B-2	GPIB Status Codes	B-2
C-1	Message Command Character Translations	C-1
D-1	Horizontal Command Results	D-1
E-1	LLMessage? Query Character Set (Code Sequenced)	E-1
E-2	LLMessage Command Character Set (Character Sequenced)	E-4