

**THE**  
**2711**  
**&**  
**2712**  

---

**SPECTRUM**  
**ANALYZERS**  
  
**PROGRAMMING**

*Please check for CHANGE INFORMATION  
at the rear of this manual.*

---

First Print January 1991

**Tektronix**<sup>®</sup>  
COMMITTED TO EXCELLENCE

Copyright © 1991 Tektronix, Inc. All rights reserved.  
Contents of this publication may not be reproduced in  
any form without the written permission of Tektronix,  
Inc.

Products of Tektronix, Inc. and its subsidiaries are  
covered by U.S. and foreign patents and/or pending  
patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are  
registered trademarks of Tektronix, Inc. TELEQUIP-  
MENT is a registered trademark of Tektronix U.K.  
Limited.

Printed in U.S.A. Specification and price change  
privileges are reserved.

Tektronix, Inc.  
P.O. Box 500  
Beaverton, Oregon 97077

Serial Number \_\_\_\_\_

# TABLE OF CONTENTS

<b>Table of Contents</b> .....	i
<b>Operators Safety Summary</b> .....	v
TERMS IN THIS MANUAL.....	v
TERMS MARKED ON EQUIPMENT .....	v
AC POWER SOURCE.....	vi
DC POWER SOURCE.....	vi
PRODUCT GROUNDING.....	vi
INPUT POWER AND VOLTAGE LIMITATIONS .....	vii
USE THE PROPER FUSE.....	vii
GENERAL PRECAUTIONS.....	vii
<b>Section 1 — Introduction</b>	
GPIB OPERATION.....	1-1
OPERATION OVER THE GPIB.....	1-4
System Controller .....	1-4
Software Device Driver.....	1-4
2711 and 2712 Equipped with the GPIB .....	1-5
Interconnecting Cable.....	1-5
Application Software.....	1-6
Printer or Plotter (Optional) .....	1-6
SETTING UP FOR GPIB OPERATION .....	1-6
Connecting the Equipment.....	1-7
Configuring the 2711 or 2712 .....	1-8
Placing the 2711 or 2712 Online.....	1-8
Setting the GPIB Device Address.....	1-8
The Power on SRQ.....	1-9
Setting the Message Terminator.....	1-9
Setting the TALK ONLY Option .....	1-10
Configuring the Device Driver .....	1-10
Installing the Device Driver .....	1-12
Configuring the (Optional) Printer or Plotter .....	1-12
Communicating with the 2711 and 2712 .....	1-13
Preparing the Software.....	1-14
A GPIB Instrument Control Program.....	1-15
RS-232 OPERATION .....	1-19
OPERATION OVER THE RS-232 INTERFACE .....	1-20
System Controller .....	1-21
Software Device Driver.....	1-22
2711 and 2712 Equipped With the RS-232 Option .....	1-22
Interconnecting Cable.....	1-22
Application Software.....	1-22
Printer or Plotter (Optional) .....	1-22
SETTING UP FOR RS-232 OPERATION.....	1-23

Connecting the Equipment .....	1-23
Configuring the Spectrum Analyzer.....	1-23
Installing and Configuring the Device Driver.....	1-28
Configuring the (Optional) Printer or Plotter.....	1-28
Communicating with the Spectrum Analyzer.....	1-29
Preparing the Software.....	1-29

**Section 2 — Instrument-Specific Message Structure**

WHAT IS A MESSAGE?.....	2-2
Input Message.....	2-3
Output Message .....	2-3
Message Unit .....	2-3
Message Unit Delimiter.....	2-3
Message Terminator (GPIB) .....	2-3
Message Terminator (RS-232).....	2-4
Command .....	2-4
Query .....	2-4
Response.....	2-4
Mnemonic or Header .....	2-4
Header Delimiter.....	2-5
Argument.....	2-5
Digit.....	2-5
Number Argument.....	2-5
Units.....	2-5
Character Argument.....	2-6
String Argument.....	2-6
Link Argument .....	2-6
Binary Block Argument.....	2-6
Argument Delimiter.....	2-7
MESSAGE BUFFERING (GPIB).....	2-7
MESSAGE BUFFERING (RS-232).....	2-8
MESSAGE FORMAT .....	2-9
Message .....	2-9
Commands.....	2-10
Queries.....	2-11
Responses .....	2-12
Headers .....	2-13
Space ( ).....	2-14
Comma (,).....	2-14
Semicolon (;).....	2-14
Colon (: ).....	2-14
Line Feed (GPIB).....	2-14
Carriage Return and Line Feed (RS-232).....	2-14

<b>Section 3 — Functional Groups</b>	
THE COMMAND/QUERY LIST.....	3-2
COMMAND AND QUERY FUNCTIONAL GROUPS .....	3-4
<b>Section 4 — Command and Query Definitions</b>	
TYPOGRAPHICAL CONVENTIONS .....	4-1
LIST OF COMMANDS AND QUERIES.....	4-3
<b>Section 5 — Status Reporting</b>	
THE SERVICE REQUEST .....	5-2
STATUS BYTE.....	5-3
EVENT CODES.....	5-7
RS-232 ERROR REPORTING .....	5-9
<b>Section 6 — Programming</b>	
INTRODUCTION TO GPIB PROGRAMMING .....	6-1
BEGINNING YOUR GPIB PROGRAM.....	6-2
ERROR TRAPPING .....	6-4
DOS Errors.....	6-4
GPIB System Errors.....	6-5
Instrument-related Errors.....	6-5
GPIB SYSTEM SOFTWARE.....	6-6
GPIB SAMPLE SUBROUTINES.....	6-7
Curve Transfers.....	6-7
Transferring Files.....	6-9
Plotting Spectrum Analyzer Screen Data .....	6-11
Returning the On-screen Readouts.....	6-14
Saving and Restoring Equipment Settings.....	6-16
Waiting for Results .....	6-18
SAMPLE GPIB CONTROLLER.....	6-21
REMOTE MENU CONTROL .....	6-27
Execute and Exit .....	6-28
Numeric Entry .....	6-29
Defining a Submenu.....	6-31
SAMPLE RS-232 CONTROLLER .....	6-32
<b>Appendix A — GPIB System Concepts</b>	
MECHANICAL ELEMENTS.....	A-1
ELECTRICAL ELEMENTS.....	A-2
FUNCTIONAL ELEMENTS.....	A-3
A TYPICAL GPIB SYSTEM.....	A-4
TALKERS, LISTENERS, AND CONTROLLERS.....	A-4
INTERFACE CONTROL MESSAGES .....	A-6
DEVICE-DEPENDENT MESSAGES .....	A-7

GPIB SIGNAL LINE DEFINITIONS.....A-11  
Transfer Bus (Handshake) .....A-12  
Management Bus .....A-14  
IFC (Interface Clear) .....A-14  
ATN (Attention).....A-14  
SRQ (Service Request) .....A-14  
REN (Remote Enable).....A-14  
EOI (End Or Identify) .....A-15  
INTERFACE FUNCTIONS AND MESSAGES.....A-15  
RL (Remote-Local Function) .....A-16  
T/TE and L/LE (Talker and Listener Functions) .....A-16  
SH and AH (Source and Acceptor Handshake Functions) .....A-17  
DC (Device Clear Function).....A-18  
DT (Device Trigger Function).....A-18  
C, SR, and PP (Controller, Service Request,  
Parallel Poll Functions).....A-19  
Taking Control (Asynchronous or Synchronous).....A-19  
Performing a Serial Poll.....A-20  
Performing a Parallel Poll .....A-20

**Appendix B — RS-232 Concepts**

INTRODUCTION TO RS-232 COMMUNICATIONS.....B-1  
RS-232 Signal Components .....B-2  
IMPLEMENTATION OF THE RS-232 INTERFACE .....B-3  
RELATED DOCUMENTATION .....B-7