

Tektronix®

COMMITTED TO EXCELLENCE

**PLEASE CHECK FOR CHANGE
INFORMATION AT THE REAR
OF THIS MANUAL.**

336 DIGITAL STORAGE OSCILLOSCOPE OPERATORS

**Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077**

**070-4420-00
Product Group 53**


INSTRUCTION MANUAL

Serial Number _____

**First Printing MAY 1983
Revised DEC 1987**

Copyright © 1983 Tektronix, Inc. All rights reserved.
Contents of this publication may not be reproduced in
any form without the written permission of Tektronix,
Inc.

Products of Tektronix, Inc. and its subsidiaries are
covered by U.S. and foreign patents and/or pending
patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are
registered trademarks of Tektronix, Inc. TELEQUIP-
MENT is a registered trademark of Tektronix U.K.
Limited.

Printed in U.S.A. Specification and price change
privileges are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert,
tag, or stamped on the chassis. The first number or letter
designates the country of manufacture. The last five
digits of the serial number are assigned sequentially and
are unique to each instrument. Those manufactured in
the United States have six unique digits. The country of
manufacture is identified as follows:

B000000	Tektronix, Inc., Beaverton, Oregon, USA
100000	Tektronix Guernsey, Ltd., Channel Islands
200000	Tektronix United Kingdom, Ltd., London
300000	Sony/Tektronix, Japan
700000	Tektronix Holland, NV, Heerenveen, The Netherlands

TABLE OF CONTENTS

	Page		Page
LIST OF ILLUSTRATIONS	iv	SECTION 3 CONTROLS, CONNECTORS, AND INDICATORS	
LIST OF TABLES	vii	INTRODUCTION	3-1
OPERATORS SAFETY SUMMARY	viii	POWER, CRT, AND DELAY TIME/CURSOR POSITION	3-1
SECTION 1 SPECIFICATION		VERTICAL CONTROLS	3-3
INTRODUCTION	1-1	HORIZONTAL CONTROLS	3-8
PERFORMANCE CONDITIONS	1-4	TRIGGER CONTROLS	3-11
SECTION 2 PREPARATION FOR USE		DISPLAY MODE, MEMORY, AND MENU CONTROLS	3-17
SAFETY	2-1	RIGHT SIDE PANEL CONNECTORS ..	3-21
LINE VOLTAGE SELECTION	2-1	BOTTOM PANEL CONTROLS	3-24
LINE FUSE	2-1	REAR PANEL	3-25
POWER CORD	2-3	MAIN MENU OPERATION	3-31
INSTRUMENT COOLING	2-4	SECTION 4 OPERATING CONSIDERATIONS	
START-UP	2-4	INTRODUCTION	4-1
REPACKAGING FOR SHIPMENT	2-4	GRATICULE	4-1
		GROUNDING	4-1
		SIGNAL CONNECTIONS	4-1

TABLE OF CONTENTS (cont)

	Page		Page
SECTION 4 OPERATING CONSIDERATIONS (cont)		SECTION 6 BASIC APPLICATIONS (cont)	
INPUT COUPLING CAPACITOR		ROLL MODE	6-15
PRECHARGING	4-3	CHART OUT	6-16
SECTION 5 OPERATOR'S CHECKS AND ADJUSTMENTS		VIEW MEMORY	6-18
INTRODUCTION	5-1	MAKING DIGITAL STORAGE MEASUREMENTS	6-21
INITIAL SETUP	5-1	INTRODUCTION	6-21
TRACE ROTATION	5-2	AC PEAK-TO-PEAK VOLTAGE	6-21
PROBE COMPENSATION	5-3	SETTING AN AMPLITUDE	6-24
VERTICAL GAIN CHECK	5-4	TIME MEASUREMENTS	6-24
HORIZONTAL ACCURACY CHECK...	5-5	SLOPE (SLEW RATE)	6-30
SECTION 6 BASIC APPLICATIONS		MAKING NONSTORAGE MEASUREMENTS	6-33
INTRODUCTION	6-1	INTRODUCTION	6-33
AUTORANGING MODE	6-1	AC PEAK-TO-PEAK VOLTAGE	6-33
SIGNAL AVERAGING	6-3	INSTANTANEOUS DC VOLTAGE ..	6-34
ACQUISITION WINDOW	6-4	TIME MEASUREMENTS	6-35
ENVELOPE MODE	6-6	DELAYED SWEEP OPERATION ...	6-40
WAVEFORM PROCESSING	6-7	ALGEBRAIC ADDITION	6-44

TABLE OF CONTENTS (cont)

	Page
SECTION 7 OPTIONS AND ACCESSORIES	
INTRODUCTION	7-1
OPTIONS	7-1
POWER CORD OPTIONS	7-1
OPTION 01	7-2
GPIB OPERATING INFORMATION .	7-2
ACCESSORIES	7-27
STANDARD ACCESSORIES	7-27
OPTIONAL ACCESSORIES	7-28
APPENDIX A GPIB DRIVER PROGRAM	
APPENDIX B DIAGNOSTICS TESTS	
POWER UP TESTS	B-1
OPERATOR INITIATED	
DIAGNOSTICS	B-1
TEST ROUTINES	B-2

LIST OF ILLUSTRATIONS

Figure		Page	Figure		Page
	The 336 Digital Storage Oscilloscope	x	3-13	PARAMETERS Menu with RMS selected and CH 1 and CH 2 readouts indicated . . .	3-36
2-1	Line voltage indicator, line fuse, and power cord receptacle	2-2	3-14	READOUT Menu controlled displays	3-40
3-1	Power, CRT, and DLY TIME/CURSOR controls	3-2	4-1	Graticule measurement markings	4-2
3-2	Vertical controls	3-4	5-1	Probe low-frequency compensation	5-4
3-3	VERT MODE Menu with CHOP Mode selected	3-6	6-1	Effects of averaging on noisy signals	6-3
3-4	SEC/DIV and Horizontal controls	3-8	6-2	Effect of Storage ACQ WINDOW selection	6-5
3-5	Trigger controls	3-12	6-3	STORE or VIEW Mode waveform processing	6-9
3-6	Trigger COUPLING Menu with HF REJ selected	3-13	6-4	Waveform PARAMETRIC measurements . .	6-14
3-7	Trigger SOURCE Menu with CH 2 selected	3-15	6-5	CHART Menu for control of X-OUT and Y-OUT signals	6-17
3-8	DISPLAY MODE and MENU controls	3-17	6-6	AC peak-to-peak voltage, cursor method . .	6-23
3-9	Right side panel connectors	3-22	6-7	Time duration (period), cursor method	6-25
3-10	Bottom panel controls	3-24	6-8	Rise time, cursor method	6-27
3-11	Rear panel	3-26	6-9	Time difference between repetitive pulses .	6-28
3-12	CURSORS Menu and cursor readout locations	3-34	6-10	Time difference between two time-related pulses	6-29
			6-11	Phase difference between sinusoidal signals	6-31
			6-12	Slope (slew rate) using cursors	6-32

LIST OF ILLUSTRATIONS (cont)

Figure		Page
6-13	Sine-wave period (time duration)	6-36
6-14	Rise time	6-38
6-15	Phase difference	6-39
6-16	High-resolution phase difference	6-40
6-17	Time difference between repetitive pulses, delay-time method	6-43
6-18	Eliminating common-mode signals	6-46
7-1	A typical system using the general purpose interface bus (GPIB)	7-4
7-2	A typical handshake timing sequence	7-6
7-3	GPIB connector and pin assignments	7-9
7-4	GPIB Control Menu	7-13
B-1	Controls and associated numbers for the NUMBER KEY STUCK diagnostic test ...	B-5

LIST OF TABLES

Table		Page
1-1	Electrical Characteristics	1-5
1-2	Environmental Characteristics	1-26
1-3	Mechanical Characteristics	1-28
1-4	Option Characteristics	1-29
2-1	International Power-Cord Data	2-3
3-1	336 Main Menu Selections	3-27
7-1	336 GPIB Function Subsets	7-10
7-2	Interface Commands	7-11
7-3	336 GPIB Status Bytes	7-16
7-4	BNF Symbol Notation	7-18
B-1	Power-on Error Messages	B-1
B-2	NUMBER KEY STUCK TEST	B-2