

2232
PORTABLE
OSCILLOSCOPE
OPERATORS


QSERVICE - 2232 OPERATORS MANUAL SAMPLE - QSERVICE

*Please Check for
CHANGE INFORMATION
at the Rear of This Manual*

First Printing DEC 1988
Revised JUN 1989

Copyright © 1988 Tektronix, Inc. All rights reserved. Contents of this publication may not be reproduced in any form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents issued and pending.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are registered trademarks of Tektronix, Inc.

Printed in U.S.A. Specification and price change privileges are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag, or stamped on the chassis. The first two digits designate the country of manufacture. The last five digits of the serial number are unique to each instrument. The country of manufacture is identified as follows:

- B000000 Tektronix, Inc., Beaverton, Oregon, U.S.A.
- E200000 Tektronix United Kingdom, Ltd., Marlow
- G100000 Tektronix Guernsey, Ltd., Channel Islands
- HK00000 Hong Kong
- H700000 Tektronix Holland, NV, Heerenveen,
The Netherlands
- J300000 Sony/Tektronix, Japan

TABLE OF CONTENTS

| | Page |
|---|------|
| LIST OF ILLUSTRATIONS | vi |
| LIST OF TABLES | ix |
| OPERATORS SAFETY SUMMARY | xi |
| SECTION 1 – GENERAL INFORMATION | |
| INTRODUCTION | 1-1 |
| ACCURACY AND RESOLUTION | 1-3 |
| STANDARD ACCESSORIES | 1-5 |
| SECTION 2 – PREPARATION FOR USE | |
| SAFETY | 2-1 |
| LINE VOLTAGE | 2-1 |
| POWER CORD | 2-1 |
| LINE FUSE | 2-4 |
| INSTRUMENT COOLING | 2-4 |
| START-UP | 2-4 |
| REPACKAGING | 2-5 |
| SECTION 3 – CONTROLS, CONNECTORS, AND INDICATORS | |
| INTRODUCTION | 3-1 |
| POWER AND DISPLAY | 3-1 |
| VERTICAL | 3-3 |
| HORIZONTAL | 3-9 |
| TRIGGER | 3-17 |
| STORAGE CONTROLS | 3-23 |
| SAVE REFERENCE/MENU ITEM SELECT | 3-27 |
| REAR PANEL | 3-28 |

| | |
|-----------------------------|------|
| SIDE PANEL | 3-30 |
| MENU SYSTEM OPERATION | 3-33 |
| SETUP ACQ MENU | 3-33 |
| SETUP DISPLAY MENU | 3-37 |
| SETUP REF MENU | 3-39 |
| SETUP PLOT MENU | 3-43 |
| SETUP ADV FUNCT MENU | 3-45 |
| CRT READOUT | 3-46 |

SECTION 4 – OPERATING CONSIDERATIONS

| | |
|--|-----|
| BASIC OPERATION | 4-1 |
| GRATICULE | 4-1 |
| GROUNDING | 4-1 |
| SIGNAL CONNECTIONS | 4-2 |
| INPUT-COUPLING CAPACITOR PRECHARGING | 4-4 |

SECTION 5 – OPERATOR'S CHECKS AND ADJUSTMENTS

| | |
|---------------------------------|-----|
| INTRODUCTION | 5-1 |
| INITIAL SETUP | 5-1 |
| TRACE ROTATION ADJUSTMENT | 5-2 |
| PROBE COMPENSATION | 5-3 |
| HORIZONTAL ACCURACY CHECK | 5-5 |

SECTION 6 – BASIC APPLICATIONS

| | |
|-----------------------------------|------|
| INTRODUCTION | 6-1 |
| OSCILLOSCOPE DISPLAYS | 6-1 |
| NON-STORE DISPLAYS | 6-1 |
| DIGITAL STORAGE DISPLAYS | 6-6 |
| NONSTORAGE MEASUREMENTS | 6-9 |
| VOLTAGE | 6-10 |
| TIMING | 6-19 |
| TELEVISION SIGNALS | 6-30 |
| DELAYED-SWEEP MAGNIFICATION | 6-32 |

| | |
|---|------|
| DELAYED-SWEEP TIME | 6-35 |
| DIGITAL STORAGE MEASUREMENTS | 6-42 |
| VOLTAGE | 6-42 |
| TIMING | 6-46 |
| LOW-LEVEL SIGNALS | 6-61 |
| OBSERVING AND REMOVING ALIASES IN STORE MODE | 6-63 |
| GLITCHES AND PULSES | 6-66 |

SECTION 7 – PERFORMANCE CHARACTERISTICS

| | |
|--------------------|-----|
| INTRODUCTION | 7-1 |
|--------------------|-----|

SECTION 8 – OPTIONS AND ACCESSORIES

| | |
|---|------|
| INTRODUCTION | 8-1 |
| ACCESSORIES AND OPTIONS DESCRIPTION | 8-1 |
| STANDARD ACCESSORIES | 8-1 |
| OPTIONAL ACCESSORIES | 8-2 |
| POWER CORD OPTIONS | 8-2 |
| OPTION 10 | 8-3 |
| OPTION 12 | 8-3 |
| OPTION 33 | 8-3 |
| COMMUNICATIONS OPTION OPERATION | 8-4 |
| OPTION 10 GPIB OPERATORS INFORMATION | 8-4 |
| OPTION 12 RS-232-C OPERATORS INFORMATION | 8-19 |
| RS-232-C PROGRAMMING | 8-33 |
| COMMUNICATION AND WAVEFORM TRANSFER | 8-35 |
| READOUT/MESSAGE COMMAND CHARACTER SET | 8-35 |
| MESSAGES AND COMMUNICATION PROTOCOL | 8-38 |
| WAVEFORM TRANSFERS | 8-42 |
| COMMUNICATION COMMANDS | 8-51 |
| STATUS BYTES AND EVENT CODES | 8-84 |

APPENDIX A – PERFORMANCE CHECK PROCEDURE

| | |
|---|------|
| INTRODUCTION | A-1 |
| PURPOSE | A-1 |
| PERFORMANCE CHECK INTERVAL | A-1 |
| STRUCTURE | A-1 |
| TEST EQUIPMENT REQUIRED | A-1 |
| LIMITS AND TOLERANCES | A-4 |
| PREPARATION FOR CHECKS | A-5 |
| INDEX TO PERFORMANCE CHECK STEPS | A-5 |
| VERTICAL | A-7 |
| INITIAL CONTROL SETTINGS | A-7 |
| PROCEDURE STEPS | A-8 |
| HORIZONTAL | A-22 |
| INITIAL CONTROL SETTINGS | A-22 |
| PROCEDURE STEPS | A-23 |
| TRIGGER | A-33 |
| INITIAL CONTROL SETTINGS | A-33 |
| PROCEDURE STEPS | A-34 |
| EXTERNAL Z-AXIS, PROBE ADJUST, EXTERNAL CLOCK, AND X-Y PLOTTER | A-42 |
| INITIAL CONTROL SETTINGS | A-42 |
| PROCEDURE STEPS | A-43 |

APPENDIX B – COMMUNICATION OPTIONS SUPPLEMENTAL INFORMATION

| | |
|---|-----|
| INTRODUCTION | B-1 |
| RS-232-C DEVICE INTERCONNECTION | B-1 |
| RS-232-C STANDARD | B-1 |
| DETERMINING DEVICE TYPE | B-1 |
| INTERCONNECTION RULES | B-2 |
| INTERCONNECTION CABLE-TYPE IDENTIFICATION | B-4 |
| RS-232-C INTERCONNECTION CABLE ILLUSTRATIONS | B-4 |

INTERCONNECTION CABLE PART NUMBERS B-14
PRINTER/PLOTTER OPERATION B-14
PLOTTER TYPES B-14
QUESTIONS AND ANSWERS B-26

CHANGE INFORMATION

QSERVICE - 2232 OPERATORS MANUAL SAMPLE - QSERVICE

LIST OF ILLUSTRATIONS

| Figure | Page |
|---|------|
| 1-1 The 2232 Digital Storage Oscilloscope | 1-1 |
| 2-1 Securing the detachable power cord to the instrument | 2-2 |
| 2-2 Optional power cord data | 2-3 |
| 3-1 Power and display controls and power-on indicator . . . | 3-1 |
| 3-2 Vertical controls and connectors | 3-3 |
| 3-3 Horizontal controls | 3-9 |
| 3-4 Trigger controls, connector, and indicator | 3-17 |
| 3-5 Storage Controls | 3-23 |
| 3-6 Save reference/menu items select buttons | 3-27 |
| 3-7 Rear panel | 3-29 |
| 3-8 Side panel | 3-30 |
| 3-9 X-Y Plotter interfacing | 3-32 |
| 3-10 ACQUISITION menu | 3-34 |
| 3-11 DISPLAY menu | 3-38 |
| 3-12 REFERENCE menu (Nvmem selected) | 3-40 |
| 3-13 REFERENCE menu (Format selected) | 3-42 |
| 3-14 PLOT menu | 3-44 |
| 3-15 ADVANCED FUNCTIONS menu | 3-46 |
| 3-16 Crt readout display | 3-47 |
| 4-1 Graticule measurement markings | 4-2 |
| 5-1 Probe compensation | 5-4 |
| 6-1 Peak-to-peak waveform voltage | 6-11 |
| 6-2 Ground-referenced voltage measurement | 6-13 |
| 6-3 Algebraic addition | 6-15 |
| 6-4 Common-mode rejection | 6-17 |
| 6-5 Time Duration | 6-20 |
| 6-6 Rise time | 6-22 |
| 6-7 Time difference between two time related pulses | 6-25 |
| 6-8 Phase difference | 6-27 |
| 6-9 High-resolution phase difference | 6-28 |

| | | |
|------|--|------|
| 6-10 | Delayed-sweep magnification | 6-34 |
| 6-11 | Time difference between repetitive pulses | 6-37 |
| 6-12 | Rise time, differential time method | 6-39 |
| 6-13 | Time difference between two time-related pulses, differential time method | 6-41 |
| 6-14 | Ac peak-to-peak voltage, cursor method | 6-43 |
| 6-15 | Ground-referenced dc voltage, cursor method | 6-46 |
| 6-16 | Time duration, cursor method | 6-47 |
| 6-17 | Rise-time setup, five-division display | 6-49 |
| 6-18 | Rise time, cursor method | 6-50 |
| 6-19 | Waveform comparison | 6-52 |
| 6-20 | Time difference between repetitive pulses | 6-54 |
| 6-21 | Time difference between two-related pulses | 6-56 |
| 6-22 | Phase difference between sinusoidal signals | 6-58 |
| 6-23 | Slope using cursors | 6-60 |
| 6-24 | Low-level signal, STORE mode | 6-62 |
| 6-25 | Low-level signal, AVERAGE mode | 6-63 |
| 6-26 | Anti-aliasing | 6-65 |
| 6-27 | Glitch display, ACCPEAK STORE mode | 6-67 |
| 6-28 | Glitch display, STORE mode using B HORIZONTAL MODE | 6-69 |
| 6-29 | Missing pulse, ACCPEAK STORE mode | 6-71 |
| | | |
| 7-1 | Maximum input voltage versus frequency derating curve for the CH 1 OR X, CH 2 OR Y, and EXT INPUT connectors | 7-27 |
| 7-2 | Physical Dimensions of the 2232 Oscilloscope | 7-28 |
| | | |
| 8-1 | Option 10 side panel | 8-8 |
| 8-2 | SRQ, ADDR, and PLOT indicators | 8-14 |
| 8-3 | Option 12 side panel | 8-23 |
| | | |
| B-1 | Nut Modem cable wiring (non-handshaking) | B-3 |
| B-2 | Type A Connections – DTE male to DCE female | B-6 |
| B-3 | Type A Connections (cont) – DTE male to DCE female | B-7 |
| B-4 | Type A1 Connections – DTE female to DCE female | B-8 |
| B-5 | Type A2 Connections – DTE male to DCE male | B-9 |
| B-6 | Type B Connections – DTE male to DTE male and DCE male to DCE male | B-10 |

| | | |
|------|--|------|
| B-7 | Type B1 Connections – DTE female to DTE male and DCE female to DCE male | B-11 |
| B-8 | Type B1 Connections (cont) – DTE female to DTE male and DCE female to DCE male | B-12 |
| B-9 | Type B2 Connections – DTE female to DTE female and DCE female to DCE female | B-13 |
| B-10 | Option 12 RS-232-C Printer/Plotter interconnects | B-15 |
| B-11 | Option 12 RS-232-C communication parameters | B-16 |
| B-12 | HP 7470A and HP 745A plotter RS-232-C switch settings | B-17 |
| B-13 | Option 12 PARAMETERS switch settings for HP-GL compatible plotters | B-18 |
| B-14 | Epson FX-Series printer RS-232-C switch settings | B-19 |
| B-15 | Option 12 PARAMETERS switch settings for Epson printers | B-20 |
| B-16 | HP ThinkJet RS-232-C switch settings | B-21 |
| B-17 | Option 12 PARAMETERS switch settings for HP ThinkJet printer | B-22 |
| B-18 | Option 10 GPIB Interface PARAMETERS switch | B-23 |
| B-19 | Option 10 PARAMETERS switch settings for compatible GPIB printers/plotters | B-24 |
| B-20 | Switch settings for compatible GPIB plotters | B-25 |

QSERVICE - 2232 OPERATOR'S MANUAL SAMPLE - QSERVICE

LIST OF TABLES

| Table | Page |
|---|------|
| 3-1 Probe Coding | 3-5 |
| 3-2 Digital Storage Modes | 3-11 |
| 3-3 Repetitive Store Sampling Data Acquisition | 3-12 |
| 3-4 Auxiliary Connector | 3-31 |
| 7-1 Electrical Characteristics | 7-2 |
| 7-2 Environmental Characteristics | 7-23 |
| 7-3 Physical Characteristics | 7-26 |
| 8-1 Function Subsets Implemented | 8-5 |
| 8-2 Specific Format Choices | 8-6 |
| 8-3 Implementation of Specific Features | 8-7 |
| 8-4 GPIB Connector | 8-9 |
| 8-5 GPIB PARAMETERS Switch | 8-11 |
| 8-6 Specific Format Choices for Option 12 | 8-20 |
| 8-7 RS-232-C DTE Connector | 8-24 |
| 8-8 RS-232-C DCE Connector | 8-25 |
| 8-9 RS-232-C PARAMETERS Switch | 8-26 |
| 8-10 Baud Rate | 8-29 |
| 8-11 Parity Selection | 8-30 |
| 8-12 Readout/MESage Command Character Set | 8-36 |
| 8-13 ASCII Code Chart | 8-37 |
| 8-14 Numeric Argument Format for Commands | 8-42 |
| 8-15 Typical 8-Bit Binary-Encoded Waveform Data | 8-45 |
| 8-16 Typical 16-Bit Binary-Encoded Waveform Data | 8-46 |
| 8-17 Typical 8-Bit Hexadecimal-Encoded Waveform Data | 8-48 |
| 8-18 Typical 16-Bit Hexadecimal-Encoded Waveform Data | 8-49 |
| 8-19 Typical ASCII-Encoded Waveform Data | 8-50 |
| 8-20 Vertical Commands | 8-53 |
| 8-21 Horizontal Commands | 8-54 |
| 8-22 Trigger Commands | 8-55 |
| 8-23 Cursor Commands | 8-56 |
| 8-24 Display Commands | 8-59 |
| 8-25 Acquisition Commands | 8-61 |
| 8-26 Save and Recall Reference Commands | 8-65 |

| | | |
|------|---|------|
| 8-27 | Waveform Commands | 8-70 |
| 8-28 | Waveform Preamble Fields | 8-73 |
| 8-29 | Miscellaneous Commands | 8-80 |
| 8-30 | Service Request Group Commands | 8-82 |
| 8-31 | RS-232-C Specific Commands | 8-83 |
| 8-32 | Status Event Error Categories | 8-86 |
| 8-33 | Event Codes | 8-87 |
| | | |
| A-1 | Test Equipment Required | A-2 |
| A-2 | Deflection Accuracy Limits | A-8 |
| A-3 | Storage Deflection Accuracy | A-10 |
| A-4 | Settings for Bandwidth Checks | A-15 |
| A-5 | Settings for Timing Accuracy Checks | A-24 |
| A-6 | Settings for Delay Time Differential Checks | A-29 |
| A-7 | Switch Combinations for A Triggering Checks | A-34 |
| | | |
| B-1 | Cable-Type Identification | B-5 |
| B-2 | RS-232-C Transfer Rates | B-27 |

QSERVICE - 2232 OPERATORS MANUAL SAMPLE - QSERVICE