

Tektronix[®]
COMMITTED TO EXCELLENCE

**Tektronix
National Marketing Center**
for Product Order Information, contact
your local Tektronix sales representative
or, in the U.S., call
1-800-426-2200 ext 41

In Oregon, call collect (503)627-9000 ext 41
Tektronix National Marketing Center
P.O. Box 500 D/S Y6-088, Beaverton, OR 97077

**PLEASE CHECK FOR CHANGE INFORMATION
AT THE REAR OF THIS MANUAL.**

**2236
OSCILLOSCOPE
OPERATORS**

INSTRUCTION MANUAL

Tektronix, Inc.
P.O. Box 500
Beaverton, Oregon 97077

070-4205-00
Product Group 46

Serial Number _____

First Printing JAN 1983
Revised JUL 1985

TABLE OF CONTENTS

	Page		Page
LIST OF ILLUSTRATIONS	ii	Section 3 OPERATORS FAMILIARIZATION (cont)	
LIST OF TABLES	ii	POWER-UP CHECKS	3-2
OPERATORS SAFETY SUMMARY	iii	CTM MEASUREMENT	
Section 1 GENERAL INFORMATION		CONSIDERATIONS	3-2
INTRODUCTION	1-1	STATUS AND ERRORS MESSAGES	3-2
SPECIFICATION	1-1	OPERATOR'S ADJUSTMENTS	3-4
CALIBRATION	1-18	INTRODUCTION	3-4
REPACKAGING FOR SHIPMENT	1-18	BASELINE TRACE	3-4
		TRACE ROTATION	3-4
		PROBE COMPENSATION	3-5
Section 2 PREPARATION FOR USE		Section 4 OPERATING PROCEDURES	
FIRST-TIME START UP	2-1	BASIC APPLICATIONS	4-1
SAFETY	2-1	INTRODUCTION	4-1
LINE VOLTAGE	2-1	INDEX TO BASIC APPLICATION	
POWER CORD	2-1	PROCEDURES	4-1
LINE FUSE	2-1	VOLTAGE MEASUREMENTS	4-1
INSTRUMENT COOLING	2-2	TELEVISION DISPLAYS	4-4
CONTROLS, CONNECTORS, AND		DELAYED-SWEEP	4-5
INDICATORS	2-2	TIME AND FREQUENCY	
DISPLAY, POWER, AND PROBE		MEASUREMENTS	4-7
ADJUST	2-2	MULTIMETER MEASUREMENTS	4-12
VERTICAL	2-5		
HORIZONTAL	2-5	Section 5 OPTIONS AND ACCESSORIES	
TRIGGER	2-6	INTRODUCTION	5-1
COUNTER, TIMER, AND		OPTION 14	5-1
MULTIMETER	2-8	POWER CORD OPTIONS	5-1
RIGHT SIDE PANEL	2-9	STANDARD ACCESSORIES	5-1
REAR PANEL	2-9	OPTIONAL ACCESSORIES	5-1
Section 3 OPERATORS FAMILIARIZATION		FRONT PANEL ILLUSTRATION	
GENERAL OPERATING INFORMATION	3-1	CHANGE INFORMATION	
GRATICULE	3-1		
GROUNDING	3-1		
SIGNAL CONNECTIONS	3-1		
INPUT COUPLING CAPACITOR			
PRECHARGING	3-1		

LIST OF ILLUSTRATIONS

Fig. No.		Page
1-1	Maximum input voltage vs frequency derating curve for CH 1 OR X & DMM, CH 2 OR Y, and EXT INPUT connectors . . .	1-16
1-2	Physical dimensions of the 2236 Oscilloscope	1-17
2-1	Optional power cords	2-1
2-2	Fuse holder and power cord connector	2-2
2-3	Power and display controls and indicators and PROBE ADJUST output	2-3
2-4	Vertical controls and connectors	2-3
2-5	Horizontal controls	2-5
2-6	Trigger controls, connector, and indicator	2-6
2-7	Counter, timer, and multimeter controls and indicator	2-8
2-8	Multimeter right side panel connectors	2-10
2-9	Rear panel connector	2-10
3-1	Graticule measurement markings	3-1
3-2	Probe compensation	3-5
4-1	Peak-to-peak waveform voltage	4-2
4-2	Instantaneous voltage measurement	4-3
4-3	Common-mode rejection	4-4
4-4	Voltage ratios	4-4
4-5	Delayed-sweep magnification	4-6
4-6	Pulse jitter	4-7
4-7	Rise time	4-9
4-8	Time difference between points on two time-related signals in nontriggered mode	4-10
4-9	Resistance measurement technique	4-13
4-10	Reverse voltage drop to reverse leakage current characteristics for typical semiconductor	4-13

LIST OF TABLES

Table No.		Page
1-1	Electrical Characteristics	1-1
1-2	Environmental Characteristics	1-15
1-3	Physical Characteristics	1-16
2-1	VERT MODE Trigger Source	2-7
3-1	Power-up Checks	3-2
3-2	Equipment Required for 10X Probe Compensation	3-5
4-1	Multimeter Connections to Forward Bias Semiconductors	4-12
4-2	Reference Resistance Values	4-13