

2245A

PORTABLE OSCILLOSCOPE OPERATORS

*Please Check for
CHANGE INFORMATION
at the Rear of This Manual*

TABLE OF CONTENTS

	Page
LIST OF ILLUSTRATIONS	vi
LIST OF TABLES	vii
OPERATORS SAFETY SUMMARY	viii
SECTION 1—INTRODUCTION	
PRODUCT OVERVIEW	1-1
Description	1-1
Standard Accessories	1-3
PREPARATION FOR USE	1-4
Safety	1-4
Line Fuse	1-4
Line Voltage and Power Cord	1-4
Instrument Cooling	1-6
Start-Up	1-6
Repackaging for Shipment	1-8
SECTION 2—CONTROLS, CONNECTORS, AND INDICATORS	
Crt, Power, and Display	2-1
Vertical	2-3
Horizontal	2-7
Trigger	2-11
A Trigger Modes	2-13
B Trigger Modes	2-14
Rear Panel	2-17
Measurements and Auto Setup Controls	2-18

SECTION 3—OPERATORS FAMILIARIZATION

BASIC OPERATION	3-1
Readout Display	3-1
Graticule	3-1
Connecting Input Signals	3-3
Grounding	3-3
Probes	3-4
Coaxial Cables	3-4
External Triggering	3-4
Auto Setup	3-5
MIN SETUP	3-5
MEASUREMENT SYSTEM	3-5
Cursor Volts Measurements	3-5
Time Measurements	3-6
Behavior for Horizontal Mode Changes	3-7
Measurement Compatibility and Error Messages	3-8
Measurements in Single Sequence Mode	3-8
Service Menu Features	3-9
Configure Menu	3-10
Self Cal Measurements	3-11
Internal Settings Menu	3-12

SECTION 4—OPERATOR CHECKS AND ADJUSTMENTS

Introduction	4-1
Initial Setup	4-1
Auto Setup Function	4-2
Trace Rotation Adjustment	4-3
Probe Low-Frequency Compensation	4-3
Vertical Deflection Check	4-5
Timing Checks	4-6

SECTION 5—BASIC APPLICATIONS

Introduction	5-1
Voltage Measurement Cursors	5-1
Voltage Difference	5-1

Time Measurement Cursors	5-3
Time Difference	5-3
Period Measurement	5-4
Frequency Measurement	5-5
Rise-Time Measurements	5-6
Phase Measurements	5-8
Time Delay Measurement	5-11
Add Mode	5-14

SECTION 6—PERFORMANCE CHARACTERISTICS

Introduction	6-1
Recommended Calibration Schedule	6-1

SECTION 7—PERFORMANCE CHECK PROCEDURE

INTRODUCTION	7-1
Test Equipment Required	7-1
Performance Check Interval	7-1
Preparation	7-1
INDEX TO PERFORMANCE CHECK PROCEDURE	7-6
DISPLAY	7-8
TRACE ROTATION	7-8
Geometry	7-9
VERTICAL	7-10
Input COUPLING Functional Check	7-10
CH 1 and CH 2 VOLTS/DIV Trace Shift	7-11
CH 3 and CH 4 VOLTS/DIV Trace Shift	7-12
CH 1 and CH 2 VAR VOLTS/DIV Trace Shift	7-12
CH 1 and CH 2 Input COUPLING Trace Shift	7-13
CH 2 INVERT Trace Shift	7-13
CH 1 and CH 2 VAR VOLTS/DIV Range	7-13
Low-Frequency Linearity	7-14
CH 1 and CH 2 Vertical Deflection Accuracy	7-15
CH 3 and CH 4 Vertical Deflection Accuracy	7-16
ADD Mode and CH 2 INVERT Deflection Accuracy	7-17
Vertical POSITION Range (all channels)	7-18
CH 1 to CH 2 Signal Delay Match	7-19
CH 1 to CH 4 Signal Delay Match	7-19
CH 3 to CH 4 Signal Delay Match	7-20
Ch 1 and CH 2 Vertical Bandwidth	7-21
CH 3 and CH 4 Vertical Bandwidth	7-22

SCOPE BW (Bandwidth Limit) Accuracy	7-22
Common-Mode Rejection Ratio	7-23
Channel Isolation	7-24
AC-Coupled Lower -3 dB Point	7-25
Vertical ALT and CHOP Modes	7-26
BEAM FIND Functional Check	7-26
A and B Trace Separation	7-27
TRIGGERING	7-28
500 Hz Trigger Sensitivity	7-27
500 kHz Trigger Sensitivity	7-28
25 MHz Trigger Sensitivity	7-30
150 MHz Trigger Sensitivity	7-31
Single Sweep Mode	7-32
Trigger LEVEL Control Range	7-33
TV Field Trigger Sensitivity	7-34
TV Line Trigger Sensitivity	7-34
Line Trigger Functional Check	7-35
HORIZONTAL	7-36
A and B Sweep Length	7-36
Horizontal POSITION Range	7-37
VAR SEC/DIV Range	7-38
Magnifier Registration	7-38
A and B Timing Accuracy and Linearity	7-38
A and B Magnified Timing Accuracy and Linearity	7-41
Delay Time Jitter	7-42
Delay Time Accuracy	7-43
Delay Time Position Range	7-44
X-Axis Gain Accuracy	7-44
X-Y Phase Difference	7-45
X-Axis Bandwidth	7-45
MEASUREMENT CURSORS	7-46
← SEC → and ← 1/SEC → Cursor Accuracy	7-46
← VOLTS → Cursor Accuracy	7-47
EXTERNAL Z-AXIS, PROBE ADJUST, AND AUTO SETUP FUNCTIONS	7-48
Check External Z-Axis Input	7-48
PROBE ADJUST Output	7-49
AUTO SETUP Functional Check	7-49
OPTION 15	7-50
Signal Output	7-50
A GATE Output	7-51

SECTION 8—OPTIONS AND ACCESSORIES

Introduction	8-1
Options A1–A5 International Power Cords	8-1
OPTION 15	8-1
Standard Accessories	8-1
Optional Accessories	8-2
Instrument Enhancements	8-2
Transportation Aids	8-2
Cameras	8-2
Probes	8-3
Viewing Hoods	8-3

APPENDIX A – AUTO-SETUP/MIN SETUP Control Settings

APPENDIX B – FACTORY SETTINGS

CHANGE INFORMATION

LIST OF ILLUSTRATIONS

Figure		Page
1-1	The 2245A Oscilloscope	1-1
1-2	Optional power cords	1-5
2-1	CRT, power, and display controls	2-2
2-2	CH 1 and CH 2 vertical controls and connectors	2-4
2-3	Vertical connectors and CH 3 and CH 4 controls and indicators	2-6
2-4	Horizontal controls and indicators	2-8
2-5	Trigger controls and indicators	2-12
2-6	Rear panel connectors and fuse	2-18
2-7	Measurement controls	2-19
3-1	Readout display locations	3-2
3-2	Graticule measurement markings	3-3
3-3	Service Menu	3-9
3-4	Configure Menu	3-11
3-5	Internal Settings Menu	3-12
4-1	Probe compensation	4-5
5-1	Voltage difference measurement using cursors	5-2
5-2	Pulse period measurement	5-5
5-3	Frequency measurement	5-6
5-4	Rise time measurement	5-8
5-5	Phase difference measurement	5-10
5-6	Time difference between two delays	5-13
5-7	Eliminating common-mode signals	5-16
6-1	Maximum input voltage vs frequency derating curve for the CH 1, CH 2, CH 3, CH 4 input connectors	6-12
6-2	Dimensional drawing, standard cabinet	6-18
6-3	Dimensional drawing, rackmount cabinet (2240F1R)	6-19

LIST OF TABLES

Table		Page
2-1	VERT Trigger SOURCE	2-16
3-1	Behavior for Horizontal MODE Changes	3-7
6-1	Electrical Characteristics	6-2
6-2	Environmental Characteristics	6-13
6-3	Mechanical Characteristics	6-15
7-1	Test Equipment Required	7-3
7-2	Signal-to-Graticule Accuracy	7-16
7-3	Settings for Timing Accuracy Checks	7-40
7-4	Delay Time Accuracy	7-43
A-1	AUTO-SETUP Control Settings	A-1
A-2	MIN SETUP Control Settings	A-4
B-1	Factory Settings	B-1

OPERATORS SAFETY SUMMARY

The safety information in this summary is for operating personnel. Warnings and cautions will also be found throughout the manual where they apply.

Terms in this Manual

CAUTION statements identify conditions or practices that could result in damage to the equipment or other property.

WARNING statements identify conditions or practices that could result in personal injury or loss of life.

Terms as Marked on Equipment

CAUTION indicates a personal injury hazard not immediately accessible as one reads the markings, or a hazard to property, including the equipment itself.

DANGER indicates a personal injury hazard immediately accessible as one reads the marking.

Symbols in this Manual



This symbol indicates where applicable cautionary or other information is to be found. For maximum input voltage see Table 6-1.

Symbols as Marked on Equipment



DANGER—High voltage.



Protective ground (earth) terminal.



ATTENTION—Refer to manual.