

# 2246 1Y, 2246 2R, and 2246 Mod A

**PORTABLE  
OSCILLOSCOPES**

**OPERATORS  
SN B100100  
AND ABOVE**

*Please Check for  
CHANGE INFORMATION  
at the Rear of This Manual*


---

**Tektronix**<sup>®</sup>  
COMMITTED TO EXCELLENCE

First Printing JUN 1988  
Revised JUN 1989

Copyright © 1988 Tektronix, Inc. All rights reserved. Contents of this publication may not be reproduced in any form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents and/or pending patents.

TEKTRONIX, TEK, SCOPE-MOBILE and  are registered trademarks of Tektronix, Inc.

Printed in U.S.A. Specification and price change privileges are reserved.

## INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag, or stamped on the chassis. The first number or letter designates the country of manufacture. The last five digits of the serial number are assigned sequentially and are unique to each instrument. Those manufactured in the United States have six unique digits. The country of manufacture is identified as follows:

B000000	Tektronix, Inc., Beaverton, Oregon, U.S.A.
G100000	Tektronix Guernsey, Ltd., Channel Islands
E200000	Tektronix United Kingdom, Ltd., Marlow
J300000	Sony/Tektronix, Japan
H700000	Tektronix Holland, NV, Heerenveen, The Netherlands
HK00000	Hong Kong

# TABLE OF CONTENTS

	Page
LIST OF ILLUSTRATIONS .....	vi
LIST OF TABLES .....	viii
OPERATORS SAFETY SUMMARY .....	ix
<b>SECTION 1—INTRODUCTION</b>	
PRODUCT OVERVIEW .....	1-1
Description .....	1-1
Standard Accessories .....	1-3
PREPARATION FOR USE .....	1-4
Safety .....	1-4
Line Fuse .....	1-4
Line Voltage and Power Cord .....	1-4
Instrument Cooling .....	1-6
Start-Up .....	1-6
Repackaging for Shipment .....	1-7
<b>SECTION 2—CONTROLS, CONNECTORS, AND INDICATORS</b>	
CRT, Power and Display .....	2-1
Vertical .....	2-3
Horizontal .....	2-7
Trigger .....	2-11
A Trigger Modes .....	2-13
B Trigger Modes .....	2-14
Rear Panel .....	2-17
Menu System Controls .....	2-19
<b>SECTION 3—OPERATORS FAMILIARIZATION</b>	
BASIC OPERATION .....	3-1
Readout Display .....	3-1
Caticule .....	3-1

Connecting Input Signals .....	3-3
Grounding .....	3-3
Probes .....	3-4
Coaxial Cables .....	3-4
External Triggering .....	3-4
<b>MENU SYSTEM OPERATION .....</b>	<b>3-5</b>
Introduction .....	3-5
Clearing the Menu and Cursors Display .....	3-5
Setting Measurement Channel .....	3-6
Recalling the Last Measurement Mode .....	3-8
Channel 1 and Channel 2 Voltmeter .....	3-8
Voltmeter Measurements Page 1 .....	3-10
Voltmeter Measurements Page 2, GATED Measurements .....	3-10
Cursors Measurements .....	3-11
Time Menus .....	3-13
Conditions for Cursors Display .....	3-16
Measurement Cursors .....	3-16
Track Trig Lvl Cursors .....	3-16
Track $\overline{h}$ Cursors .....	3-17
Behavior for Horizontal Mode Change .....	3-17
Measurement Compatibility and Error Messages .....	3-18
Measurements in Single Sequence Mode .....	3-19
Service Menu Features .....	3-20
Configure Menu .....	3-21
Self Cal Measurements .....	3-23
Internal Settings Menu .....	3-23

## **SECTION 4—OPERATOR CHECKS AND ADJUSTMENTS**

Introduction .....	4-1
Initial Setup .....	4-1
Trace Rotation Adjustment .....	4-2
Probe Low-Frequency Compensation .....	4-3
Vertical Deflection Check .....	4-4
Timing Checks .....	4-5

## SECTION 5—BASIC APPLICATIONS

Introduction .....	5-1
CH 1/CH 2 Voltmeter Measurements .....	5-1
Peak Voltage Measurement .....	5-2
Gated Voltage Measurement .....	5-4
Voltage Measurement Cursors .....	5-6
Voltage Difference .....	5-6
Ground-Referenced Voltage .....	5-8
Time Measurement Cursors .....	5-10
Time Difference .....	5-10
Period Measurement .....	5-11
Frequency Measurement .....	5-11
Rise-Time Measurements .....	5-12
Phase Measurements .....	5-14
Time Delay Measurement .....	5-17
Track Trigger Level Cursors .....	5-19
Setting Trigger Level .....	5-23
Use of the Add Mode .....	5-24

## SECTION 6—PERFORMANCE CHARACTERISTICS

Introduction .....	6-1
Recommended Calibration Schedule .....	6-1

## SECTION 7—PERFORMANCE CHECK PROCEDURE

Introduction .....	7-1
Test Equipment Required .....	7-1
Performance Check Interval .....	7-1
Preparation .....	7-2
Index to Performance Check Procedure .....	7-6
DISPLAY .....	7-8
Trace Rotation .....	7-8
Geometry .....	7-9
VERTICAL .....	7-10
Input COUPLING Functional Check .....	7-10
CH 1 and CH 2 VOLTS/DIV Trace Shift .....	7-11
CH 3 and CH 4 VOLTS/DIV Trace Shift .....	7-12
CH 1 and CH 2 VAR VOLTS/DIV Trace Shift .....	7-12
CH 1 and CH 2 Input COUPLING Trace Shift .....	7-13
CH 2 INVERT Trace Shift .....	7-13

CH 1 and CH 2 VAR VOLTS/DIV Range	7-14
Low Frequency Linearity Check	7-14
CH 1 and CH 2 Vertical Deflection Accuracy	7-15
CH 3 and CH 4 Vertical Deflection Accuracy	7-16
ADD Mode and CH 2 INVERT Deflection Accuracy	7-16
Vertical POSITION Range (all channels)	7-17
CH 1 to CH 2 Signal Delay Match	7-19
CH 1 to CH 4 Signal Delay Match	7-19
CH 3 to CH 4 Signal Delay Match	7-20
Ch 1 and CH 2 Vertical Bandwidth	7-20
CH 3 and CH 4 Vertical Bandwidth	7-21
Ch 1 and CH 2 Aberrations	7-22
SCOPE BW (Bandwidth Limit) Accuracy	7-22
Common-mode Rejection Ratio	7-23
Channel Isolation	7-24
AC-Coupled Lower -3 dB Point	7-25
Vertical ALT and CHOP Modes	7-26
BEAM FIND Functional Check	7-26
A and B Trace Separation	7-27
TRIGGERING	7-28
500 Hz Trigger Sensitivity	7-28
500 kHz Trigger Sensitivity	7-29
25 MHz Trigger Sensitivity	7-30
100 MHz Trigger Sensitivity	7-31
100 MHz NOISE REJ Trigger Sensitivity	7-32
Single Sweep Mode	7-32
Trigger LEVEL Control Range	7-33
TV Field Trigger Sensitivity	7-34
TV Line Trigger Sensitivity	7-34
Line Trigger Functional Check	7-35
HORIZONTAL	7-36
A and B Sweep Length	7-36
Horizontal POSITION Range	7-37
VAR SEC/DIV Range	7-37
Magnifier Registration	7-38
A and B Timing Accuracy and Linearity	7-38
A and B Magnifier Timing Accuracy and Linearity	7-40
Delay Time Jitter	7-41
Delay Time Accuracy	7-41
Delay Time Position Range	7-42
X-Axis Gain Accuracy	7-43
X-Y Phase Difference	7-43
X-Axis Bandwidth	7-44

TIME AND CURSORS MEASUREMENTS .....	7-45
← SEC →  and ← 1/SEC →  Cursor Accuracy .....	7-45
Delta Time Accuracy .....	7-46
← PHASE →  Cursor Accuracy .....	7-47
← VOLTS →  Cursor Accuracy .....	7-47
⚡ VOLTS →  Cursor Accuracy .....	7-48
Tracking Cursors Position Accuracy .....	7-48
CH 1/CH 2 VOLTMETER MEASUREMENTS .....	7-50
DC Volts Accuracy .....	7-50
DC Volts Normal Mode Rejection Ratio .....	7-51
+Peak, -Peak, Peak-to-Peak Voltage Accuracy .....	7-52
25 MHz +Peak, -Peak, and Peak-to-Peak Volts Accuracy .....	7-53
100 MHz +Peak, -Peak, and Peak-to-Peak Volts Accuracy .....	7-53
Gated Volts Accuracy .....	7-54
EXTERNAL Z-AXIS, PROBE ADJUST AND FACTORY SETTINGS FUNCTIONS .....	7-55
Check External Z-Axis Input .....	7-55
PROBE ADJUST Output .....	7-56
Run MAKE FACTORY SETTINGS Routine .....	7-56

## SECTION 8—OPTIONS AND ACCESSORIES

Introduction .....	8-1
Option 2R (Rackmount) .....	8-1
Options A1-A5 International Power Cords .....	8-1
Standard Accessories .....	8-2
Optional Accessories .....	8-3
Instrument Enhancements .....	8-3
Transportation Aids .....	8-3
Cameras .....	8-3
Probes .....	8-3
Viewing Hoods .....	8-3

## APPENDIX A — FACTORY SETTINGS

## APPENDIX B — 067-0557-00 CALIBRATION FIXTURE

# LIST OF ILLUSTRATIONS

Figure		Page
1-1	The 2246A Oscilloscope .....	1-1
1-2	Optional power cords .....	1-5
2-1	CRT, power, and display controls .....	2-2
2-2	CH 1 and CH 2 vertical controls and connectors .....	2-4
2-3	Vertical connectors and CH 3 and CH 4 controls .....	2-6
2-4	Horizontal controls and indicators .....	2-8
2-5	Trigger controls and indicators .....	2-12
2-6	Rear panel .....	2-18
2-7	Menu controls .....	2-20
3-1	Readout display locations .....	3-2
3-2	Graticule measurement markings .....	3-3
3-3	Voltmeter measurement channel menu .....	3-6
3-4	Delay-Time/Delta-Time channel menu .....	3-7
3-5	Voltmeter and Gated Measmt menus .....	3-9
3-6	Cursor Volts measurements menus .....	3-12
3-7	Time measurement menu .....	3-14
3-8	Service menu .....	3-20
3-9	Configure menu .....	3-22
3-10	Internal settings menu .....	3-24
4-1	Probe compensation .....	4-4
5-1	+PEAK voltage measurement and tracking cursors .....	5-4
5-2	Gated voltage measurement .....	5-6
5-3	Voltage difference measurement using cursors .....	5-7
5-4	Voltage measurement .....	5-9
5-5	Period measurement .....	5-11
5-6	Frequency measurement .....	5-12
5-7	Rise time measurement .....	5-13
5-8	Making a phase difference measurement .....	5-16
5-9	Time difference between the two delays .....	5-19
5-10	A and B Track Trig Lvl cursors .....	5-20
5-11	Setting a specific trigger level .....	5-23



5-12	Eliminating common-mode signals	5-26
6-1	Maximum input voltage vs frequency derating curve for the CH 1, CH 2, CH 3, and CH 4 input connectors	6-15
6-2	Dimensional drawing, standard cabinet	6-22
6-3	Dimensional drawing, rackmount cabinet (2240 F1R)	6-23

# LIST OF TABLES

Table		Page
2-1	VERT Trigger SOURCE .....	2-16
3-1	Behavior for Horizontal MODE Changes .....	3-18
5-1	Trigger Cursor Channel .....	5-22
6-1	Electrical Characteristics .....	6-2
6-2	Environmental Characteristics .....	6-16
6-3	Mechanical Characteristics .....	6-19
7-1	Test Equipment Required .....	7-3
7-2	Signal-to-Graticule Accuracy .....	7-15
7-3	Settings for Timing Accuracy Checks .....	7-38
7-4	Delay Time Accuracy .....	7-42
A-1	Factory Settings .....	A-1