

**2247A
PORTABLE
OSCILLOSCOPE
OPERATORS**


*Please Check for
CHANGE INFORMATION
at the Rear of This Manual*

First Printing JAN 1989

Qservice 2247A Operators manual Sample - Qservice

Copyright © 1988, 1989 Tektronix, Inc. All rights reserved. Contents of this publication may not be reproduced in any form without the written permission of Tektronix, Inc.

Products of Tektronix, Inc. and its subsidiaries are covered by U.S. and foreign patents issued and pending.

TEKTRONIX, TEK, SCOPE-MOBILE and  are registered trademarks of Tektronix, Inc.

Printed in U.S.A. Specification and price change privileges are reserved.

INSTRUMENT SERIAL NUMBERS

Each instrument has a serial number on a panel insert, tag, or stamped on the chassis. The first two digits designate the country of manufacture. The last five digits of the serial number are unique to each instrument. The country of manufacture is identified as follows:

B000000	Tektronix, Inc., Beaverton, Oregon, U.S.A.
E200000	Tektronix United Kingdom, Ltd., London
G100000	Tektronix Guernsey, Ltd., Channel Islands
HK00000	Tektronix, Inc., Hong Kong
H700000	Tektronix Holland, NV, Heerenveen, The Netherlands
J300000	Sony/Tektronix, Japan

TABLE OF CONTENTS

	Page
LIST OF ILLUSTRATIONS	viii
LIST OF TABLES	ix
OPERATORS SAFETY SUMMARY	x
SECTION 1—INTRODUCTION	
PRODUCT OVERVIEW	1-1
Description	1-1
Standard Accessories	1-3
PREPARATION FOR USE	1-4
Safety	1-4
Line Fuse	1-4
Line Voltage and Power Cord	1-4
Instrument Cooling	1-6
Start-Up	1-6
Repackaging for Shipment	1-7
SECTION 2—CONTROLS, CONNECTORS, AND INDICATORS	
CRT, Power and Display	2-1
Vertical	2-3
Horizontal	2-8
Trigger	2-12
A Trigger Modes	2-15
B Trigger Modes	2-16
Rear Panel	2-20
Menu System Controls	2-21

SECTION 3—OPERATORS FAMILIARIZATION

INTRODUCTION 3-1

BASIC OPERATION 3-1

Graticule 3-1

Readout Display 3-2

Connecting Input Signals 3-4

 Grounding 3-4

 Probes 3-4

 Coaxial Cables 3-4

 External Triggering 3-5

Auto Setup 3-5

Min Setup 3-5

MENU SYSTEM OPERATION 3-5

Introduction 3-6

Clearing the Menu and Cursors Display 3-7

Setting Measurement Channel 3-7

Recalling the Last Measurement Mode 3-9

Channel 1 and Channel 2 Voltmeter 3-10

 Voltmeter Measurements Page 1 3-12

 Voltmeter Measurements Page 2, GATED Measurements 3-12

Cursor Volts Measurements 3-13

Time Menus 3-15

Counter/Timer 3-25

 C/T Measurement Menu Page 1 3-25

 Gated C/T Measurement Menu Page 2 3-27

 C/T Control Menu 3-28

Conditions for Cursors Display 3-30

 Measurement Cursors 3-30

 Track Trig Lvl Cursors 3-31

 Track μ Cursors 3-31

Behavior for Horizontal Mode Changes 3-32

Measurement Compatibility and Error Messages 3-33

Measurements in Single Sequence Mode 3-34

Service 2247A Operators manual Sample - Oservice

Page

SECTION 3—OPERATORS FAMILIARIZATION (cont)

Service Menu Features 3-35

 Configure Menu 3-35

 Self Cal Measurements 3-39

 Internal Settings Menu 3-39

Store/Recall Setup Features 3-40

 Factory Stored Setups 3-42

 Recall Only Menu 3-42

 Store/Recall Setup Menu 3-45

 Recovering A Deleted Setup 3-49

 Storing Setups in Sequences 3-50

SECTION 4—OPERATOR CHECKS AND ADJUSTMENTS

Introduction 4-1

Initial Setup 4-1

Auto Setup Function 4-2

Trace Rotation Adjustment 4-3

Probe Low-Frequency Compensation 4-3

Vertical Deflection Check 4-5

Timing Checks 4-6

SECTION 5—BASIC APPLICATIONS

Introduction 5-1

CH 1/CH 2 Voltmeter Measurements 5-1

Peak Voltage Measurement 5-2

Gated Voltage Measurement 5-4

Voltage Measurement Cursors 5-6

 Voltage Difference 5-6

 Ground-Referenced Voltage 5-8

SECTION 5—BASIC APPLICATIONS (cont)

Time Measurement Cursors	5-10
Time Difference	5-10
Propagation Delay	5-11
Rise Time Measurements	5-11
Phase Measurements	5-11
Frequency and Period Measurements	5-14
Time Delay Measurement	5-14
Track Trigger Level Cursors	5-17
Setting Trigger Level	5-21
Use of the Add Mode	5-22

SECTION 6—PERFORMANCE CHARACTERISTICS

Introduction	6-1
Recommended Calibration Schedule	6-1

SECTION 7—PERFORMANCE CHECK PROCEDURE

Introduction	7-1
Test Equipment Required	7-1
Performance Check Interval	7-1
Preparation	7-1
Index to Performance Check Procedure	7-6
DISPLAY	7-8
Trace Rotation	7-8
Geometry	7-9
VERTICAL	7-10
Input COUPLING Functional Check	7-10
CH 1 and CH 2 VOLTS/DIV Trace Shift	7-11
CH 3 and CH 4 VOLTS/DIV Trace Shift	7-12
CH 1 and CH 2 VAR VOLTS/DIV Trace Shift	7-12
CH 1 and CH 2 Input COUPLING Trace Shift	7-13
CH 2 INVERT Trace Shift	7-13

SECTION 7—PERFORMANCE CHECK PROCEDURE (cont)

VERTICAL (cont)

CH 1 and CH 2 VAR VOLTS/DIV Range	7-13
Low Frequency Linearity Check	7-14
CH 1 and CH 2 Vertical Deflection Accuracy	7-15
CH 3 and CH 4 Vertical Deflection Accuracy	7-16
ADD Mode and CH 2 INVERT Deflection Accuracy	7-17
Vertical POSITION Range (all channels)	7-18
CH 1 to CH 2 Signal Delay Match	7-19
CH 1 to CH 4 Signal Delay Match	7-20
CH 3 to CH 4 Signal Delay Match	7-21
Ch 1 and CH 2 Vertical Bandwidth	7-21
CH 3 and CH 4 Vertical Bandwidth	7-22
SCOPE BW (Bandwidth Limit) Accuracy	7-23
Common-mode Rejection Ratio	7-23
Channel Isolation	7-24
AC-Coupled Lower -3 dB Point	7-25
Vertical ALT and CHOP Modes	7-26
BEAM FIND Functional Check	7-26
A and B Trace Separation	7-27
TRIGGERING	7-28
500 Hz Trigger Sensitivity	7-28
500 kHz Trigger Sensitivity	7-30
25 MHz Trigger Sensitivity	7-30
150 MHz Trigger Sensitivity	7-31
Single Sweep Mode	7-33
Trigger LEVEL Control Range	7-34
TV Field Trigger Sensitivity	7-34
TV Line Trigger Sensitivity	7-35
Line Trigger Functional Check	7-35

Qservice 2247A Operators manual Sample - Qservice

	Page
SECTION 7—PERFORMANCE CHECK PROCEDURE (cont)	
HORIZONTAL	7-37
A and B Sweep Length	7-37
Horizontal POSITION Range	7-38
VAR SEC/DIV Range	7-38
Magnifier Registration	7-39
A and B Timing Accuracy and Linearity	7-39
A and B Magnified Timing Accuracy and Linearity	7-40
Delay Time Jitter	7-42
Delay Time Accuracy	7-43
Delay Time Position Range	7-44
X-Axis Gain Accuracy	7-45
X-Y Phase Difference	7-45
X-Axis Bandwidth	7-46
MEASUREMENT CURSORS	7-47
← SEC → and ← 1/SEC → Cursor Accuracy	7-47
← PHASE → Cursor Accuracy	7-48
← VOLTS → Cursor Accuracy	7-49
↗ VOLTS → Cursor Accuracy	7-49
Tracking Cursors Position Accuracy	7-49
CH 1/CH 2 VOLTMETER	7-51
DC Volts Accuracy	7-51
DC Volts Normal Mode Rejection Ratio	7-52
+Peak, -Peak, Peak-to-Peak Volts Accuracy	7-53
25 MHz +Peak, -Peak, and Peak-to-Peak Volts Accuracy	7-54
100 MHz +Peak, -Peak, and Peak-to-Peak Volts Accuracy	7-54
Gated Volts Accuracy	7-55
COUNTER/TIMER	7-56
Period	7-56
Width	7-57
Rise Time Accuracy	7-59

Page

SECTION 7—PERFORMANCE CHECK PROCEDURE (cont)

EXTERNAL Z-AXIS AND PROBE ADJUST AND FRONT-PANEL SETUP FUNCTIONS 7-61

 Check External Z-Axis Input 7-61

 PROBE ADJUST Output 7-62

 AUTO SETUP Functional Check 7-62

 Run MAKE FACTORY SETTINGS Routine 7-63

OPTION 15 7-64

 Signal Output 7-64

 A GATE Output 7-65

SECTION 8—OPTIONS AND ACCESSORIES

Introduction 8-1

International Power Cords 8-1

Option 15 8-1

Option 1R Rackmounted Instrument 8-2

Other Available Options 8-2

Standard Accessories 8-3

Optional Accessories 8-3

APPENDIX A - AUTO SETUP and MIN SETUP CONTROL SETTINGS

APPENDIX B - FACTORY SETTINGS

APPENDIX C - FACTORY STORED SETUPS

LIST OF ILLUSTRATIONS

Figure	Page
1-1 The 2247A Oscilloscope	1-1
1-2 Optional power cords	1-5
2-1 CRT, power, and display controls	2-2
2-2 CH 1 and CH 2 vertical controls and indicators	2-4
2-3 Vertical connectors and CH 3 and CH 4 controls	2-7
2-4 Horizontal controls and indicators	2-9
2-5 Trigger controls and indicators	2-14
2-6 Rear panel	2-20
2-7 Menu controls	2-22
3-1 Graticule measurement markings	3-2
3-2 Readout display locations	3-3
3-3 Menu buttons	3-6
3-4 Typical Store/Recall Setup sequencing	3-41
4-1 Probe compensation	4-5
5-1 +PEAK voltage measurement and tracking cursors	5-4
5-2 Gated voltage measurement	5-6
5-3 Voltage difference measurement using cursors	5-7
5-4 Voltage measurement	5-9
5-5 Making a phase difference measurement	5-13
5-6 Time difference between the two delays	5-17
5-7 A and B Track Trig Lvl cursors	5-18
5-8 Setting a specific trigger level	5-21
5-9 Eliminating common-mode signals	5-24
6-1 Maximum input voltage vs frequency derating curve for the CH 1, CH 2, CH 3, and CH 4 input connectors	6-27
6-2 Dimensional drawing, standard cabinet	6-33
6-3 Dimensional drawing, rackmount cabinet (2240F 1R)	6-34

Qservice 2247A Operators manual Sample - Qservice

LIST OF TABLES

Table		Page
2-1	VERT Trigger SOURCE	2-18
3-1	Behavior for Horizontal MODE Changes	3-32
5-1	Trigger Cursor Channel	5-20
6-1	Electrical Characteristics	6-2
6-2	Environmental Characteristics	6-28
6-3	Mechanical Characteristics	6-30
7-1	Test Equipment Required	7-3
7-2	Signal-to-Graticule Accuracy	7-15
7-3	Settings for Timing Accuracy Checks	7-41
7-4	Delay Time Accuracy	7-44
A-1	AUTO SETUP Control Settings	A-1
A-2	MIN SETUP control Settings B020100 and above	A-5
B-1	Factory Settings	B-1

Qservice 2247A Operators manual Sample - Qservice