
TEK

070-6286-02
Product Group 37

**2430A
DIGITAL
OSCILLOSCOPE
OPERATORS
SERIAL NUMBER P020000 AND ABOVE**

*Please Check for
CHANGE INFORMATION
at the Rear of This Manual*

First Printing FEB 1989
Revised JUN 1990

Tektronix[®]
COMMITTED TO EXCELLENCE

Contents

	Page
Preface	i
Illustrations	xi
Tables	xi
Operators Safety Summary	xii
1 General Information	
Introduction	1-1
Product Overview	1-1
Preparation For Use	1-3
Safety	1-3
Line Voltage Selection	1-3
Line Fuse	1-4
Power Cord	1-7
Instrument Cooling	1-7
Start-Up	1-8
Power-Down	1-9
Repackaging For Shipment	1-10
“Getting Acquainted” Procedure	1-11
2 Operation	
Operating Considerations	2-1
Graticule	2-1
Time and Voltage Measurements	2-2
Acquiring Data	2-3
Grounding	2-4
Signal Connections	2-4
Probe	2-4
Coaxial Cables	2-5
Input Precharging	2-6
External Triggering	2-6
Operators Familiarization Procedures	2-7
Introduction	2-7
Readout Display	2-7
Front-Panel Controls	2-7
Familiarization Procedures	2-9
Getting a Display	2-9
Front-Panel Setup	2-11
Storing Front-Panel Setups	2-14
Performing SELF-CALibration	2-16
Using the SEC/DIV Control and a Horizontal Graticule	

2 Operation (cont)

Measurement.....	2-17
Using CH1 Controls and a Vertical Graticule Measurement.....	2-18
Using SAVE and DISPLAY REF Storage Modes.....	2-19
Using Dual-Channel Displays.....	2-22
Review of ENVELOPE and AVG (Average) ACQUIRE Modes.....	2-23
Using SINGLE SEQ Trigger Mode.....	2-24
Using The Cursors.....	2-25
Volts Cursors.....	2-25
V@T Cursors.....	2-27
SLOPE Cursors.....	2-28
TIME Cursors.....	2-29
1/TIME Cursors.....	2-30
DELAY Features.....	2-32
DELAY by TIME.....	2-32
DELAY by EVENTS.....	2-34
Extended Features.....	2-36
Using AUTOsetup.....	2-37
Using MEASURE.....	2-39
Using PRGM (AutoStep Sequencer).....	2-44

3 Applications

General Applications.....	3-2
Voltage Measurements.....	3-2
Peak-to-Peak Voltage.....	3-2
Instantaneous DC Voltage Level.....	3-3
ADD Mode Measurements.....	3-4
Noise Reduction and Unwanted Signal Cancellation.....	3-6
MULT Mode Measurements.....	3-9
TIME AND FREQUENCY Measurements—Non-Delayed.....	3-12
Delay Time Measurements and Applications.....	3-14
DELAY TIME Mode As A Magnifier.....	3-14
Other Delay Applications.....	3-17
Δ Delay Time and Frequency Measurements.....	3-18
Delay By Events Measurements.....	3-21
General Information for Delay Acquisition Usage.....	3-23
Special Applications.....	3-24
Cursor Measurements.....	3-24
Voltage Measurements.....	3-24
Delta Voltage Measurements.....	3-25
Ratio Between Two Voltages.....	3-26
Absolute Voltage Cursor Measurements.....	3-29
Time and Frequency Measurements.....	3-30
Δ Time Cursor Measurements.....	3-31
Ratio Between Two Time Periods.....	3-34

3 Applications (cont)

Absolute TIME Cursor Measurements	3-35
Voltage Coupled to Time Cursors (V@T)	3-37
Slope Measurements	3-40
Special Units for Coupled Cursors	3-42
A*B Trigger Source Application.....	3-43
Storage Applications	3-46
Acquire Modes	3-46
NORMAL Mode	3-46
AVG (Average) Mode	3-46
ENVELOPE Mode	3-49
ROLL Mode	3-50
REPET Mode	3-51
SAVE Storage Mode	3-51
SAVEREF SOURCE and DISPLAY REF	3-54
SAVE ON Δ Mode	3-56
Extended Features Applications.....	3-61
Auto Setup.....	3-62
“Quick and Dirty” Display of a Signal	3-62
“Quick and Dirty” Displays of Parameters.....	3-62
Dual-Channel Auto Setup Displays	3-64
Considerations for Using Auto Setup.....	3-65
MEASURE.....	3-67
SNAPSHOT, A Quick Measurement of Waveform Parameters.....	3-67
Interpreting the Display	3-70
Characterization of the Leading Edge of a Pulse	3-71
Parameter Measurements Using the Continuous-Update Mode.....	3-74
Delay Measurements Between Signals.....	3-77
AUTOSTEP SEQUENCER (PRGM).....	3-85
Storage of a Single Front-Panel Setup	3-85
Storage of a Sequence of Front-Panel Setups.....	3-86
Using a Sequence	3-88
Interaction of Sequencer with Acquisition Modes.....	3-89

4 Checks and Adjustments

Introduction.....	4-1
Starting Setup.....	4-1
Trace Rotation Adjustment	4-2
Focus and Astigmatism Adjustment	4-2
Vertical Gain Check	4-3
Horizontal Gain Check.....	4-3
Probe Low-Frequency Compensation.....	4-4

5 Controls, Connectors and Indicators

CRT Display, Menu Buttons and Power	5-1
Vertical Controls	5-6
Cursors	5-13
External Interface	5-20
General Purpose Interface Bus	5-22
Horizontal Controls.....	5-29
Delay Controls	5-31
Trigger Controls	5-34
Storage System	5-44
Extended Features.....	5-56
Rear Panel	5-79
System Menus.....	5-82

6 Performance Characteristics

Introduction	6-1
Vertical System.....	6-2
Horizontal System.....	6-2
Trigger System.....	6-3
Cursor Measurements	6-4
Waveform Acquisition	6-4
Data Storage and Proprietary Information Removal.....	6-5
TEKSECURE.....	6-5
I/O.....	6-6
Extended Features.....	6-6
Standard Accessories.....	6-7
Performance Conditions	6-8
Recommended Adjustments Schedule.....	6-8

7 Options and Accessories

Options Descriptions	7-1
Options A1-A7—International Power Cords	7-2
Option 1R—Rackmounting	7-2
Option 03—Word Recognizer Probe	7-3
Option 05—Video Option	7-3
Option 11—Probe Power	7-3
Option Operating Information.....	7-4
Video Options.....	7-4
Introduction.....	7-4
Video Option Accessories.....	7-4
Video Option Specifications.....	7-4
General Operation	7-5
Setting Up the Video Option.....	7-6
Setting a Line Number	7-8
System-M/Nonsystem-M Selection	7-9
Special Measurements.....	7-9
Identifying Fields, Frames, and Lines in 525/60 and 625/50 TV	7-10
Basic Applications.....	7-11

7 Options and Accessories (cont)

Initial Setup	7-12
Signal Input Coupling.....	7-14
Word Recognizer Probe Options.....	7-16
Word Probe Setup	7-17
Basic Application.....	7-18
Accessories.....	7-19
Standard Accessories.....	7-19
Rackmounting Accessories	7-19
Optional Accessories	7-20

A Extended Functions

SPECIAL Functions	A-1
SYSTEM Functions	A-1
PREFLT ON/OFF.....	A-2
PANEL.....	A-2
MISC	A-3
AUTO PROBE.....	A-3
VIDEO OPT.....	A-4
INTERP.....	A-5
Interpolation Mode	A-6
VIDEO OPT.....	A-7
CAL/DIAG Functions	A-8
Internal Diagnostic Routines.....	A-8
Self Diagnostics.....	A-8
Power-on/Self Diagnostics Test Failure	A-8
Extended Diagnostics	A-11
Service Routines	A-11
Internal Calibration Routines	A-12
Self Calibration	A-12
Extended Calibration.....	A-12
Calibration/Diagnostic Operation	A-13
Self Calibration.....	A-14
Extended Calibration	A-14
Power-On Self Diagnostics	A-15
Front-Panel Self Diagnostics	A-15
Extended Diagnostics.....	A-15
UP/DOWN Arrows	A-16
RUN/SEL.....	A-17
MODE.....	A-17
HALT	A-17
GPIB Operation	A-18
Self Calibration.....	A-18
Extended Calibration	A-19
Self Diagnostics	A-19
Extended Diagnostics.....	A-19

B Reference Tables

VOLTS/DIV Range With Attenuator Probes	B-1
Calibrator Frequency	B-2
Averaging SNIR	B-3
REPETITIVE Acquisition	B-3
SMOOTH	B-4
Variable HOLDOFF	B-4
Trigger LEVEL Range and Resolution	B-6
Auto Triggering and Auto Leveling	B-7
B Trigger Source	B-8
Trigger Position	B-9
Delay Time and Delay Time Resolution	B-10
Trigger Status Indicators	B-13
Waveform Display Summary	B-14
STACK REF Storage Operation	B-15
SAVE ON DELTA Operation	B-16
Front-Panel Settings for INIT PANEL	B-17
Front-Panel Settings for Auto Setup	B-22

C Waveform Parameter Extraction

Introduction	C-1
Parameter Extraction from the Waveform	C-1
Overview	C-1
BASE-TOP Determination	C-2
MIN/MAX Method	C-2
HISTOgram Method	C-2
CURSOR Method	C-3
Level Calculations	C-4
Determination of Time-Reference Points	C-8
Time-Reference Points Search Procedure	C-8
Calculation of the Waveform Parameters	C-9
Interaction of MEASURE with Acquisition Modes	C-14
ENVELOPE Mode	C-14
AVERAGE Mode	C-15
REPET Mode	C-15
SAVEd Expanded Waveforms	C-16
Vertical Expansion	C-16
SMOOTH Acquisition Mode	C-16
ROLL Acquisition Mode	C-16
Glossary of Parameter Extraction Terms	C-17
Warning and Error Messages for MEASURE	C-18
ERROR Messages	C-18
WARNING Messages	C-21

Illustrations

Figure	Page
1-1	LINE VOLTAGE SELECTOR, fuse, and power cord receptacle..... 1-5
2-1	Graticule measurement markings 2-1
2-2	Readout display locations..... 2-8
2-3	SELECT menu and menu control buttons..... 2-11
3-1	Sine wave peak-to-peak voltage 3-3
3-2	Instantaneous DC voltage levels on a waveform 3-5
3-3	Cancellation of common-mode noise for differential signals 3-6
3-4	Cancellation of an unwanted component in a signal 3-8
3-5	Rise time of a square wave (time duration)..... 3-13
3-6	DELAY TIME used as a positionable magnifier 3-16
3-7	Δ DELAY TIME used to measure the period of a square wave..... 3-20
3-8	Delay and Δ Delay acquisitions as displayed for CH1, CH2, and ADD (or MULT) VERTICAL MODE..... 3-21
3-9	Measuring a 3.5-V sine-wave signal using VOLTS cursors..... 3-26
3-10	Measuring the ratio between the amplitudes of two sine-wave signals 3-28
3-11	Voltage measurement of a step on a stair-case signal using the VOLTS cursor function in the ABS mode 3-30
3-12	Time measurements using TIME Cursor function and modes 3-33
3-13	Time measurement of an event relative to the Record Trigger 3-36
3-14	VOLTS coupled to TIME cursors displayed on a triangle wave 3-36
3-15	V@T measurements on triangle-wave signals 3-39
3-16	High resolution measurement of the frequency of a sine-wave signal..... 3-41
3-17	Slope measurement on a triangle-waveform..... 3-42
3-18	Effect of signal averaging on a noisy square wave 3-48
3-19	Using the SAVEREF function with ENVELOPE mode to monitor and save a square wave 3-59
3-20	AUTOsetup for EDGE (rising)..... 3-72
3-21	SNAPSHOT of a pulse's rise time..... 3-73
3-22	Continuous-Update Mode for MEASURE..... 3-76
3-23	Dual-Channel Auto Setup in VIEW mode..... 3-78
3-24	DELAY Measurement between a pulse and a gate..... 3-81
3-25	DELAY measurement locations on waveforms..... 3-82
3-26	Controlling measurement location with WINDOW mode..... 3-83
4-1	Probe low-frequency compensation 4-5
5-1	POWER, DISPLAY controls, and MENU buttons..... 5-2
5-2	STATUS readout display 5-5
5-3	Vertical controls and connectors 5-14
5-4	Typical cursor displays 5-15
5-5	External interface 5-20
5-6	Horizontal and delay controls 5-32
5-7	Storage and trigger controls..... 5-55
5-8	AUTO, PRGM, and MEASURE buttons..... 5-59
5-9	Event order for sequences..... 5-72
5-10	Rear-panel controls and connectors..... 5-79
5-11	GPIO-connector pin arrangement 5-82

Illustrations

Figure	Page
6-1 Dimensional drawing	6-3
7-1 Composite video signal with and without TV clamping	7-15
A-1 EXTENDED DIAGNOSTICS Menu	A-13
B-1 Amplitude response for smooth function	B-4
B-2 RTRIG versus horizontal display modes	B-12
C-1 Parameter extraction using HISTOgram method	C-7
C-2 Parameter extraction using MIN/MAX method	C-7

Tables

Table	Page
1-1 Voltage, Fuse, and Power-Cord Data	1-6
2-1 Equipment Required	2-36
3-1 Delay Displays versus Vertical MODE	3-19
3-2 SNIR vs Number of Acquisitions	3-47
3-3 Vertical Expansion Factors	3-52
3-4 Horizontal Expansion Factors	3-53
5-1 Approximate Exponential-Averaging Time Constants at 10 Hz	5-48
5-2 Control Menus and Displays	5-83
6-1 Electrical Characteristics	6-9
6-2 Environmental Characteristics	6-26
6-3 Mechanical Characteristics	6-29
6-4 Video Option 05 (TV Trigger) Electrical Characteristics	6-31
A-1 Calibration and Diagnostics Codes and Names	A-20
B-1 VOLTS/DIV Readout Switching With Coded Probes	B-1
B-2 Calibrator Frequency and Period for Each A SEC/DIV Setting	B-2
B-3 Signal-to-Noise Improvement Ratio Versus Number of Averages	B-3
B-4 Repet Acquisitions Required To Complete a Single Sequence	B-3
B-5 Variable Trigger Holdoff	B-5
B-6 Trigger Resolution	B-6
B-7 Auto Triggering and Auto-Leveling Intervals	B-7
B-8 B Trigger Source Menu Versus B Trigger Mode	B-8
B-9 RTRIG Point versus Trigger Position Menu Selection	B-9
B-10 Maximum B SEC/DIV Delay Time and Resolution	B-10
B-11 TRIG'D, READY, and ARM Indicator Status	B-13
B-12 Display Priority Versus Display Mode	B-14
B-13 REF Storage Operation versus Horizontal and Vertical Modes	B-15
B-14 SAVE ON DELTA Comparisons	B-16
B-15 INIT PANEL States	B-17
B-16 Front-Panel Settings After an Auto Setup	B-22
C-1 Definition of Parameters	C-10
C-2 Error Messages for MEASURE	C-18
C-3 Warning Messages for MEASURE	C-21

Section 6

This section contains tables of the electrical, environmental, and mechanical characteristics of the instrument. An introductory summary of the instrument's capabilities precedes the specification tables. A dimensional drawing of the instrument is included at the end of the section.

Section 7

This section contains information about available instrument options, including operating instructions for the Video Option and the Word Recognizer Probe. It also contains a list of the standard instrument accessories and a partial list of the recommended optional accessories.

Appendix A

The Extended Functions menus and the internal calibration and diagnostics capabilities of the scope are described. For the operator's information, a table at the rear of the appendix lists the Extended Diagnostics test codes and abbreviated names.

Appendix B

This appendix contains supplemental reference tables and information.

Appendix C

This appendix discusses special considerations for using the MEASURE feature to automatically extract and measure waveform parameters. It includes a table that lists and explains the error and warning messages issued by MEASURE.