

Qservice ----- This Document is a complete scan from the Original Tektronix Manual ----- Qservice

---

**TEK** OPERATORS  
MANUAL

070-6282-00  
Product Group 38

---

# **24X5A/2467 OPTION 10 INSTRUMENT INTERFACING GUIDE**

**Qservice Sample**

*Please Check for  
CHANGE INFORMATION  
at the Rear of This Manual*

---

First Printing SEP 1986  
Revised OCT 1986

**Tektronix**<sup>®</sup>  
COMMITTED TO EXCELLENCE

# Contents

	<b>Page</b>
Tables .....	iv
Operators Safety Summary .....	v
<b>1 Introduction</b>	
<b>2 Measurement Capabilities and Characteristics</b>	
Cursors .....	2-1
Frequency and Period .....	2-1
Time Interval .....	2-2
Repetitive Time Intervals .....	2-2
Non-Repetitive Time Intervals .....	2-3
Peak Amplitude .....	2-3
<b>3 Programming Techniques</b>	
<b>Qservice Sample</b>	
<b>4 System Configuration</b>	
Setting GPIB System Parameters .....	4-1
Instrument Configuration .....	4-3
IBM PC/XT/AT Configuration .....	4-4
Program Considerations at Power-on .....	4-5
<b>5 Communication Between Oscilloscope and Controller</b>	
Output Statements .....	5-1
Query Commands and Responses .....	5-2
Input Statements .....	5-3
Setup Transfers .....	5-3
Sending and Receiving ASCII Setups .....	5-4
Sending and Receiving Binary Setups .....	5-5
IRQ and Event Codes .....	5-5
Interface Messages .....	5-6
Local Lockout (LLO) .....	5-6
Remote Enable (REN) .....	5-7
Go To Local (GTL) .....	5-7
My Listen Address and My Talk Addresses .....	5-7
Unlisten (UNL) and Untalk (UNT) .....	5-7
Interface Clear (IFC) .....	5-7
Device Clear (DCL) .....	5-8

	<i>Page</i>
Selected Device Clear (SDC).....	5-5
Serial Poll Enable and Disable (SPE and SPD) .....	5-8
Command Handler .....	5-8
Service-Request Handler .....	5-9
GPIB Commands .....	5-10
Headers .....	5-10
Arguments .....	5-10
Command Separator.....	5-11
Queries .....	5-11
Message Terminator .....	5-11
Abbreviations .....	5-11
Numeric Arguments .....	5-12

**6 GPIB Commands**

**7 Measurement Techniques**

**Qservice Sample**

Measuring Peak Voltages.....	7-5
Measuring Rise and Fall Times .....	7-6
Trigger Level Compensation.....	7-10
Programming Examples.....	7-10

**A Appendix A**

Programming Examples .....	A-1
Tektronix 4041 Program to Send Commands to the Oscilloscope ..	A-1
Tektronix 4041 Program to Calibrate Trigger Levels for Transition Time .....	A-2
IBM PC/XT/AT Program to Calibrate Trigger Levels for Transition Time .....	A-9
HP 98XX Program to Calibrate Trigger Levels for Transition Time .....	A-18
Tektronix 4041 Subroutine to Measure Frequency, Count, and Time .....	A-28
IBM PC/XT/AT Subroutine to Measure Frequency, Count, and Time .....	A-29
Tektronix 4041 Subroutine to Measure Peak Voltages .....	A-32
IBM PC/XT/AT Subroutine to Measure Peak Voltages .....	A-33
HP 98XX Subroutine to Measure Peak Voltages .....	A-35

# Qservice Sample

**C Appendix C**

Message Command .....	C-1
-----------------------	-----

**D Appendix D**

Sweep Speed Command and Considerations .....	D-1
--	-----

**E Appendix E**

GPIB Command Reference .....	E-1
------------------------------	-----

**F Appendix F**

LLMessage Command Character Translations .....	F-1
--	-----

## Tables

<b>Table</b>	<b>Page</b>
1-1 Functional Enhancement Options .....	1-1
5-1 Command or Query Byte Counts .....	5-4
5-2 Numeric Argument Format for GPIB Commands .....	5-12
6-1 Vertical Commands .....	6-1
6-2 Horizontal Commands.....	6-4
6-3 Trigger Commands.....	6-6
6-4 Delay and Delta Commands .....	6-11
6-5 System Commands.....	6-13
6-6 GPIB Command Set for the TV Option.....	6-23
6-7 Counter/Timer/Trigger GPIB Commands .....	6-28
6-8 Word Recognizer GPIB Commands .....	6-28
6-9 GPIB Command Set for the DMM Option .....	6-29
6-10 Calibration and Diagnostic Commands .....	6-33
7-1 Delay Time and Delta-Delay Time .....	7-13
B-1 Status Event and Error Categories .....	B-2
B-2 GPIB Status Codes .....	B-2
C-1	
C-2	
D-1	
E-1	
F-1	
F-2 LLMessage Command Character Set .....	F-10

Qservice Sample