

**2710
SPECTRUM
ANALYZER**


Please Check for CHANGE INFORMATION at the Rear of This Manual

First Printing MAR 1988

Tektronix[®]
COMMITTED TO EXCELLENCE

Copyright © 1987 Tektronix, Inc. All rights reserved.
Contents of this publication may not be reproduced in
any form without the written permission of Tektronix,
Inc.

Products of Tektronix, Inc. and its subsidiaries are
covered by U.S. and foreign patents and/or pending
patents.

TEKTRONIX, TEK, SCOPE-MOBILE, and  are
registered trademarks of Tektronix, Inc. TELEQUIP-
MENT is a registered trademark of Tektronix U.K.
Limited.

Printed in U.S.A. Specification and price change privi-
leges are reserved.

PREFACE

The OPERATORS manual is one of a set of manuals for the Tektronix 2710 Spectrum Analyzer. This manual contains the instrument's specifications, control descriptions, menu descriptions, operational check, and operating features. The manual organization and content is shown in the Table of Contents. These instructions assume the reader has a basic understanding of frequency domain analysis.

Other instruction manuals for this product are:

2710 Service Manual

For manual ordering information, refer to the Standard and Optional Accessories listing in Section 1 of this manual or contact your local Tektronix Field Office.

Standards and Conventions Used

Most terminology is consistent with standards adapted by IEEE and IEC. Appendix A provides a glossary of terms. Abbreviations used on the instrument and in the documentation are consistent with ANSI Y1.1-1972. Copies of ANSI and IEEE standards can be ordered from the Institute of Electrical and Electronic Engineers Inc.

Change/History Information

Manual corrections or additional information is included when manual pages are revised. A revised page is identified by a revision date located in the lower inside corner of the page.

TABLE OF CONTENTS

	PAGE		PAGE
PREFACE	i		
TABLE OF CONTENTS	ii		
SAFETY SUMMARY	v		
Section 1 GENERAL INFORMATION		Section 3 DISPLAY, CONTROLS, & CONNECTORS	
INSTRUMENT DESCRIPTION	1-1	Front Panel (layout)	3-1
OPTIONS	1-1	Rear Panel (layout)	3-1
UNPACKING	1-1	DISPLAY	3-2
STORAGE	1-1	Spectral	3-2
REPACKING FOR SHIPMENT	1-2	Menu Mode	3-2
INITIAL INSPECTION	1-2	CRT Nomenclature	3-3
INSTALLATION	1-2	FRONT PANEL CONTROLS	3-4
RACKMOUNT	1-2	Freq/markers	3-5
POWER REQUIREMENTS	1-2	Freq Span/Div	3-5
SERVICE INFORMATION	1-2	Resolution Bandwidth	3-5
STANDARD ACCESSORIES	1-3	Reference Level	3-6
OPTIONAL ACCESSORIES	1-3	Vertical Scale	3-6
		Display Storage	3-6
Section 2 SPECIFICATIONS		Sweep and Triggering	3-7
ELECTRICAL CHARACTERISTICS	2-1	Utility	3-7
Frequency Related	2-1	Miscellaneous Controls	3-7
Frequency/Amplitude Related	2-3	REAR PANEL CONTROLS	3-8
Amplitude Related	2-5	CONNECTORS	3-8
Input/Output Signal	2-7	Front Panel	3-8
Power Requirements	2-8	Rear Panel	3-8
General Characteristics	2-9	Rear Panel connector usage	3-8
ENVIRONMENTAL CHARACTERISTICS	2-10		
PHYSICAL CHARACTERISTICS	2-11		

	PAGE		PAGE
Section 4 MENU OPERATION		Section 6 (Continued)	
INTRODUCTION	4-1	OPERATION:	
MENU DISPLAY	4-1	SIGNAL APPLICATION	6-2
KEYPAD AND ALPHA CHARACTERS	4-3	Mixer Input Considerations	6-2
MENU SELECTIONS	4-3	Level of Pulsed Signals	6-2
INVOKING A SELECTION	4-3	Level of Continuous Wave Signals	6-2
MENU PATH	4-4	True VS Spurious Signals	6-2
DISPLAY RESPONSE	4-4	Preamplifier	6-2
MENU DESCRIPTIONS	4-4	Measurements outside specified	
		Frequency and Tuning Range	6-2
INPUT MENU	4-5	Counter Feature	6-2
		Using the Center Measure	6-3
MARKER/FREQ MENU	4-7	Signal Tracking	6-3
SETUP TABLE	4-7	Stored Settings	6-3
PROGRAMMED TUNING INCREMENT	4-7	Keyboard Entered Settings	6-3
SWEEP/TRIGGER MENU	4-9	MARKERS	6-3
SETUP TABLE	4-9	Frequency Mode	6-3
		Marker Mode	6-3
DISPLAY MENU	4-11	Delta Marker Mode	6-4
ENSEMBLE AVERAGING	4-13	Amplitude Measurement	6-4
TITLE MODE	4-15	Control Selection	6-4
APPLICATIONS MENU	4-17	RESOLUTION BANDWIDTH, FREQUENCY SPAN, and SWEEP TIME	6-4
SETUP TABLE	4-17	Using the Video Filters	6-4
		Using Time Domain Operation	6-4
DETECTOR/GENERATOR MENU	4-19	Triggering the Display	6-5
		Single Sweep Feature	6-5
UTILITY MENU	4-21	Sweeping the Display	6-5
STORED SETTINGS	4-23	Manual Scan of the Spectrum	6-5
KEYBOARD ENTERED SETTINGS	4-23	Reference Level	6-5
INSTRUMENT			
DIAGNOSTICS/ADJUSTMENTS	4-25	DISPLAY STORAGE	6-5
SERVICE NORMALIZATIONS	4-25	Waterfall Feature	6-5
		Maximum Hold Feature	6-6
Section 5 OPERATIONAL CHECK		Aquisition Mode	6-6
		"B" minus "A" register &	
Power-up Procedure	5-1	"C" minus "A" register	6-6
Menu Path Description	5-2		
		MEASUREMENTS:	
Section 6 FEATURES, OPERATION, and MEASUREMENTS		Frequency Mode	6-6
FEATURES:		Marker Mode	6-6
Installed Options and Firmware Version	6-1	Delta Markers Mode	6-7
Audio Alert Volume	6-1	Signal Level	6-7
Warning and Error Messages	6-1	Measuring Bandwidth	6-7
Intensity Level	6-1	Carrier-to-Noise Measurement	6-7
Trace Alignment	6-1	Frequency Corrections	6-7
Normalization Feature	6-1	Signal Detecting	6-7
		FM Modulation Deviation	6-7
		Normalizing the Internal Reference	6-7
		Precision Measuring (Normalization) Considerations	6-8

	PAGE
Section 7 OPTIONS	7-1
Introduction	7-1
Option A1 Through A5	7-1
Option B1	7-1
Option M1 Through M3	7-1
OPTION 01	7-1
OPTION 02	7-1
OPTION 06	7-2
OPTION 09	7-2
OPTION 10	7-3
OPTION 11	7-3
OPTION 15	7-5
OPTION 30	7-5
OPTION 33	7-8
OPTION 34	7-8

Appendix A GLOSSARY

CHANGE INFORMATION