

TEKTRONIX®

465

OSCILLOSCOPE
OPERATORS

INSTRUCTION MANUAL

TABLE OF CONTENTS

	Page		Page
Introduction	1	Input Coupling	38
Operating Voltage	1	Trigger Source	39
Controls And Connectors	3	Trigger Coupling	40
Applications		Trigger Slope	41
General	12	Trigger Level	41
Peak-To-Peak Voltage Measurements—AC	12	A Sweep Triggered Light	42
Instantaneous Voltage Measurements—DC	14	A Trigger Mode	42
Comparison Measurements	15	A Trigger Holdoff	43
Time-Duration Measurements	18	Horizontal Mode of Operation	43
Frequency Measurement	20	Horizontal Sweep Rates	44
Risetime Measurements	20	Sweep Magnification	45
Time-Difference Measurements	21	X-Y Operation	45
Delayed or Mixed Sweep Time Measurement	23	Output Signals	46
Delayed or Mixed Sweep Magnification	25	Intensity Modulation	46
Pulse Jitter Measurements	27	Calibrator	47
Delayed Trigger Generator	29	Obtaining Basic Displays	
Normal Trigger Generator	30	Introduction	47
Multi-Trace Phase Difference Measurements	30	Normal Sweep Display	48
High Resolution Phase Measurements	32	Magnified Sweep Display	49
X-Y Phase Measurement	32	Delayed Sweep Displays	49
Common-Mode Rejection	34	Mixed Sweep Display	50
Operational Features		X-Y Display	50
General	35	User's Calibration	
Intensity Control	35	General	50
Graticule	36	TRACE ROTATION Adjustment	51
Vertical Mode of Operation	36	Vertical GAIN	51
Deflection Factor	38	Probe Compensation	51
Ground Considerations	38	Basic Timing Accuracy	52
		External Horizontal Gain Accuracy	52

465 OSCILLOSCOPE

Introduction

This Operators Handbook is intended to give the necessary information to allow a user to become familiar with the instrument's power requirements, functions of controls and connectors, and also provides a few methods of making several different measurements of electrical phenomena. Also included is a rudimentary procedure for checking basic instrument calibration.

Operating Voltage

CAUTION

This instrument is designed for operation from a power source with its neutral at or near earth (ground) potential with a separate safety-earth conductor. It is not intended for operation from two phases of a multi-phase system, or across the legs of a single-phase three-wire system.

This instrument can be operated from either a 115-volt or a 230-volt nominal line voltage source, 48 to 440 hertz. The line voltage selector switch in the instrument converts the instrument from one nominal operating voltage to the


other. The regulating range selector assembly on the instrument rear panel selects one of three regulating ranges for each nominal line voltage, and also contains the line fuses for overload protection for both nominal line voltages. To select the correct nominal line voltage and regulating range, proceed as follows:

1. Disconnect the instrument from the power source.
2. To convert from 115-volts nominal to 230-volts nominal line voltage, set the selector switch to the 230-volts position (toward the rear of the instrument). Change the line-cord plug to match the power source or use a 115-to-230 volt adapter.

NOTE

Color-coding of the cord conductors is as follows (in accordance with National Electrical Code):

<i>Line</i>	<i>Black</i>
<i>Neutral</i>	<i>White</i>
<i>Safety earth (ground)</i>	<i>Green</i>

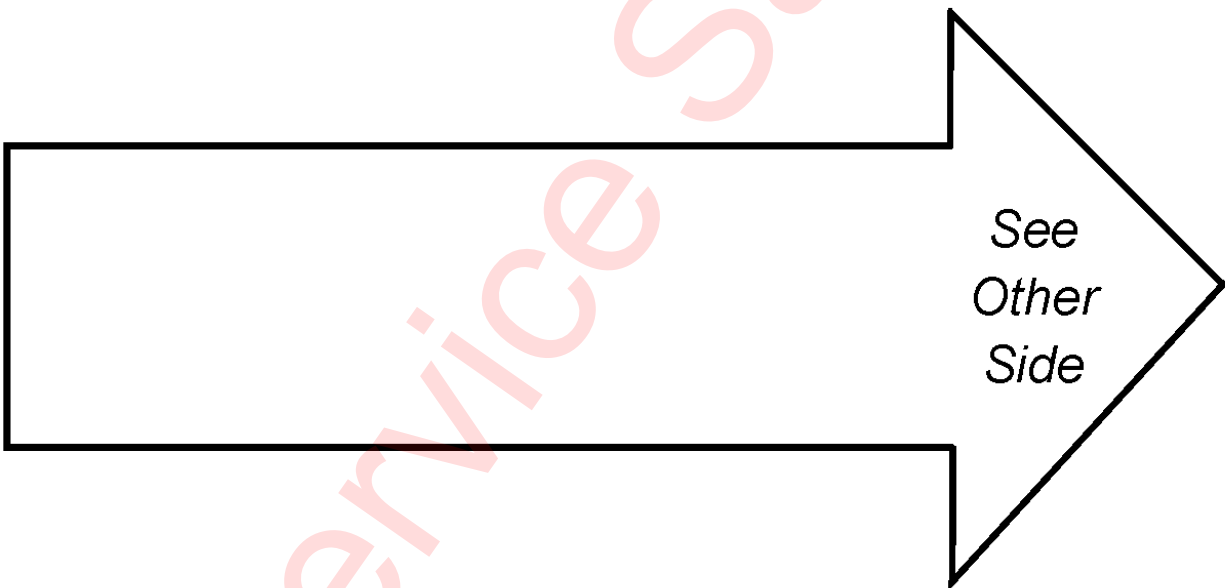

See
Other
Side